

ADVANCED HIGH CEILING Whiz 2.0 - Adjustable Uplight



METEOR



IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS


IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. All servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be at locations and at heights and in a manner consistent with its intended use, and in compliance with Electrical Code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

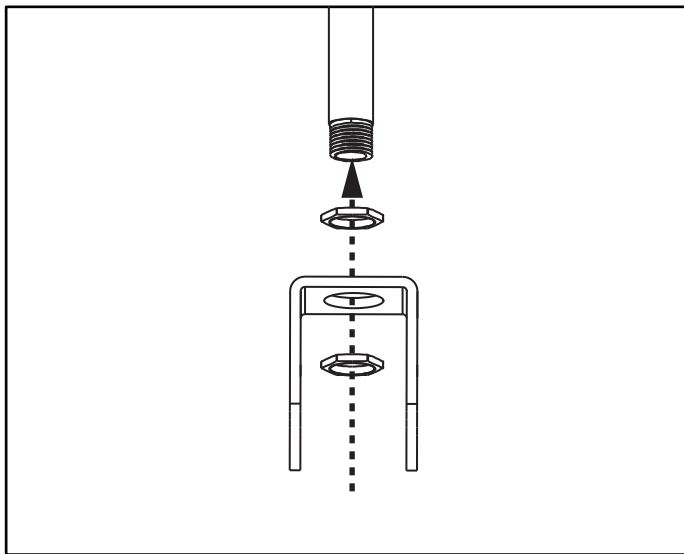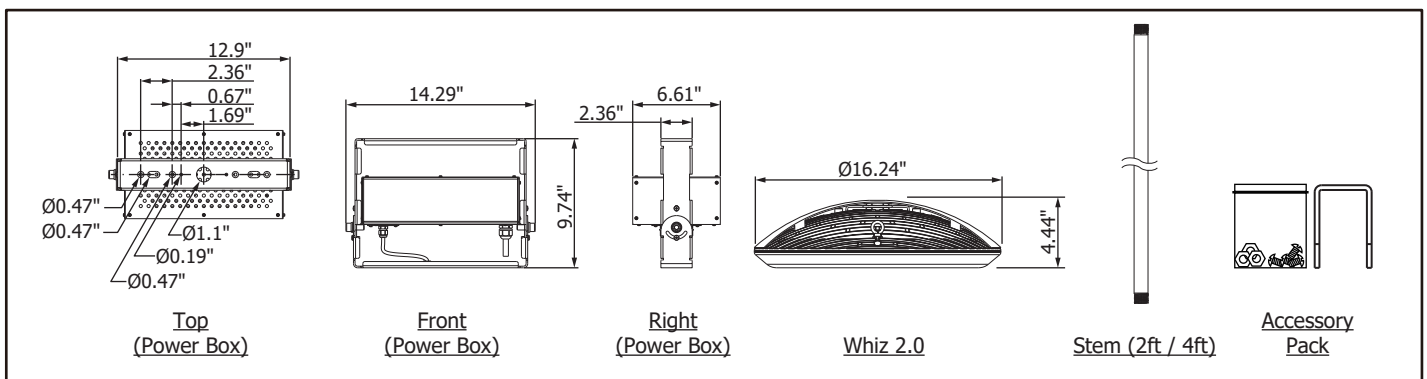

Step 1

Fasten 2 Hex screw on either side of the uplight bracket.

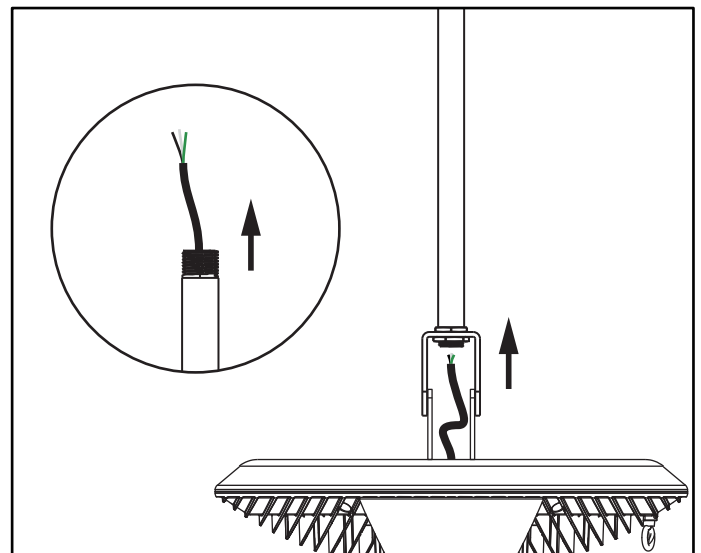


Step 2

Fixture cables go through the stem and all the way through.


ADVANCED HIGH CEILING Whiz 2.0 - Adjustable Uplight

METEOR

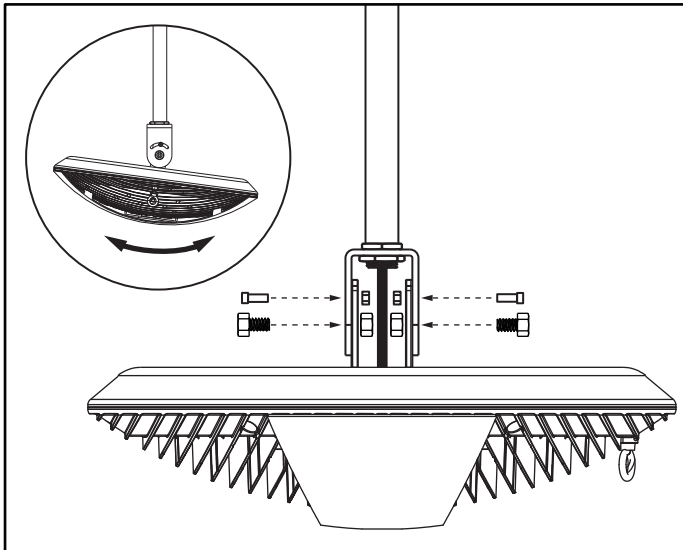


Step 3

Fasten the uplight bracket with the provided screws.

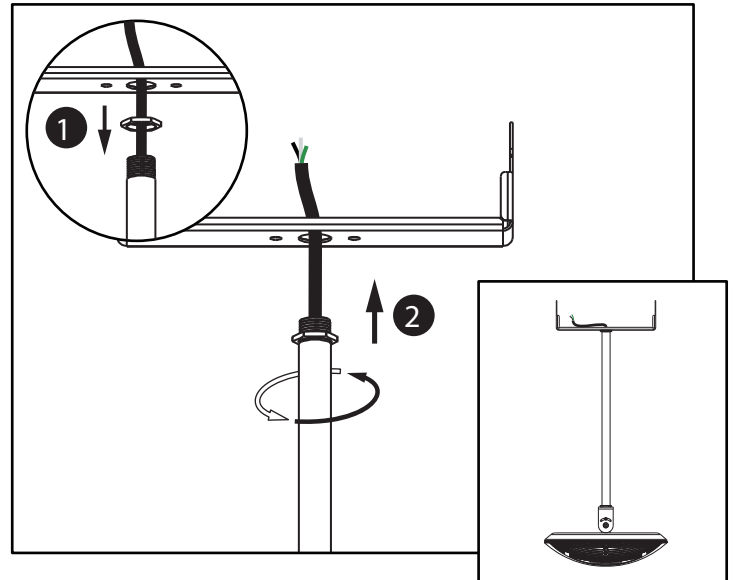


Step 4

First, push the cables through a Hex screw and tighten on stem grooves. Second, fasten the stem onto the lower bracket.

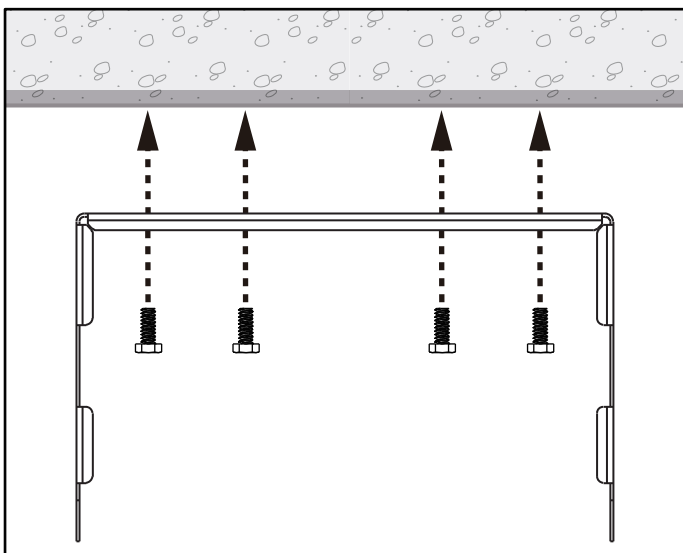

Step 5

Fasten the top bracket on the desired location on the ceiling.

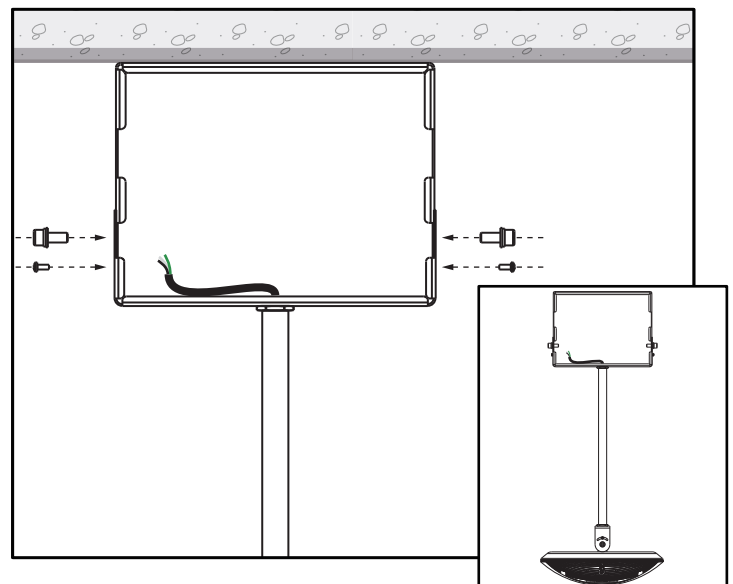


Step 6

Align both lower and upper brackets and fasten in place.


ADVANCED HIGH CEILING Whiz 2.0 - Adjustable Uplight

METEOR

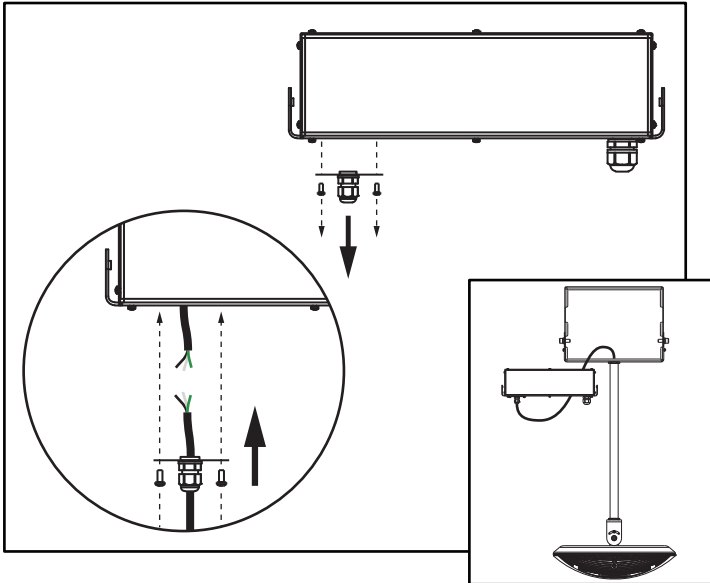


Step 7

Open the DC Junction box and connect cables. Refer to wiring diagram section.

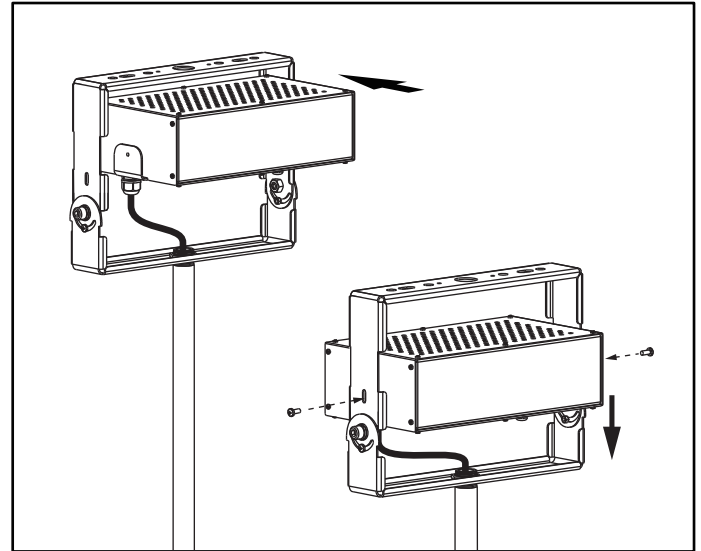


Step 8

Slip the power box hook fastener over the lock-in grooves allocated and fasten screws on either side to keep the power box in place.

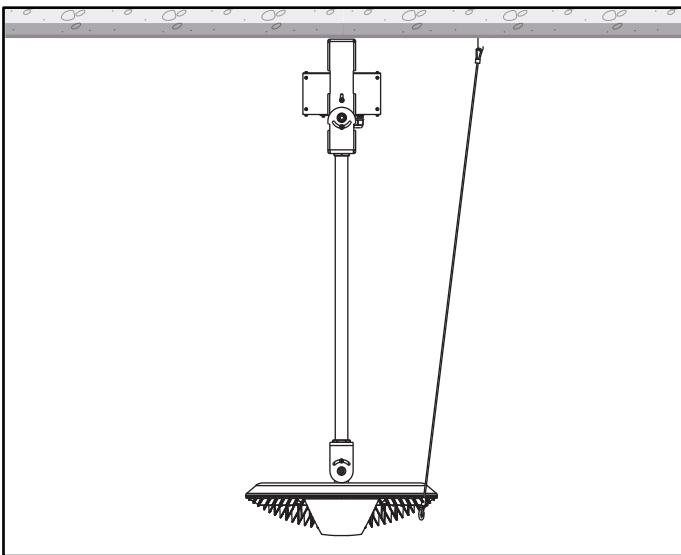

Step 9

Hook the safety cable.

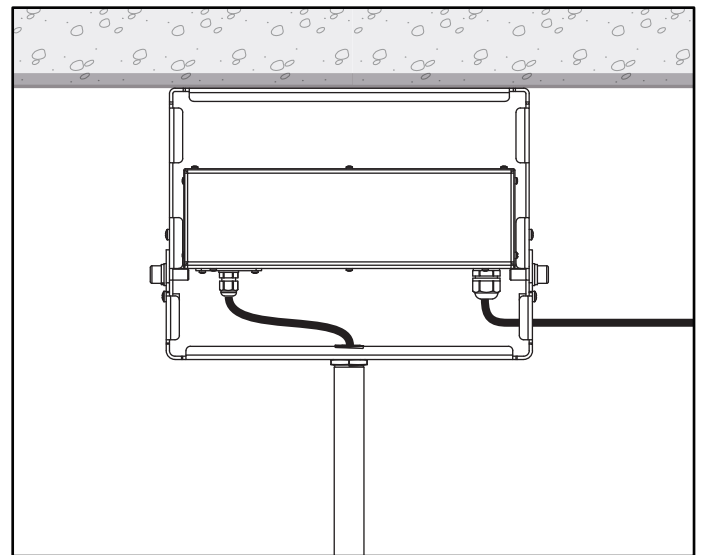

Step 10


Connect AC Cable to Junction Box.

ADVANCED HIGH CEILING Whiz 2.0 - Adjustable Uplight




Wiring Diagram


Standard0-10V (WS2.0-120 / WS2.0-170 / WS2.0-240)

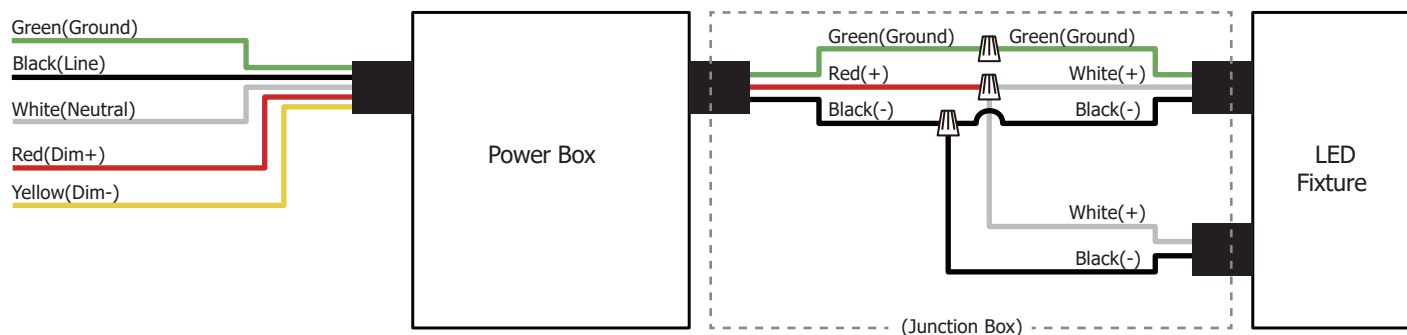

Standard0-10V (WS2.0-300)

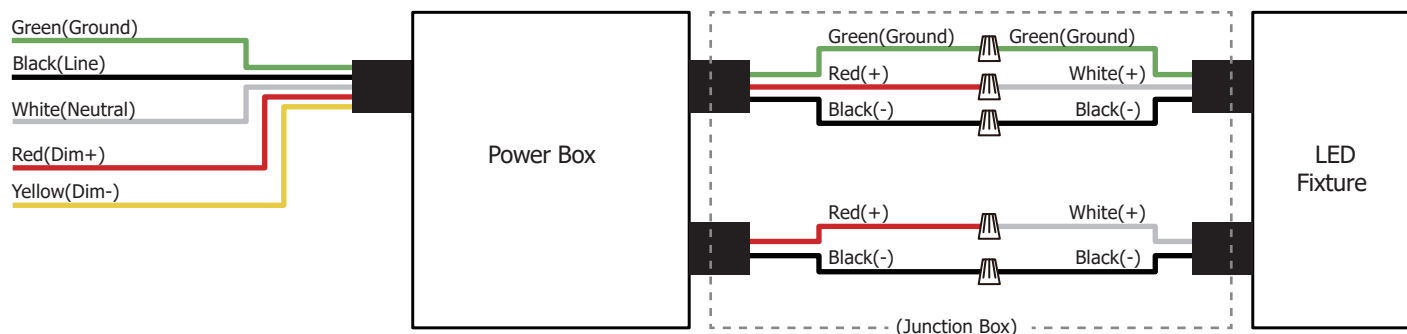

Superior0-10V

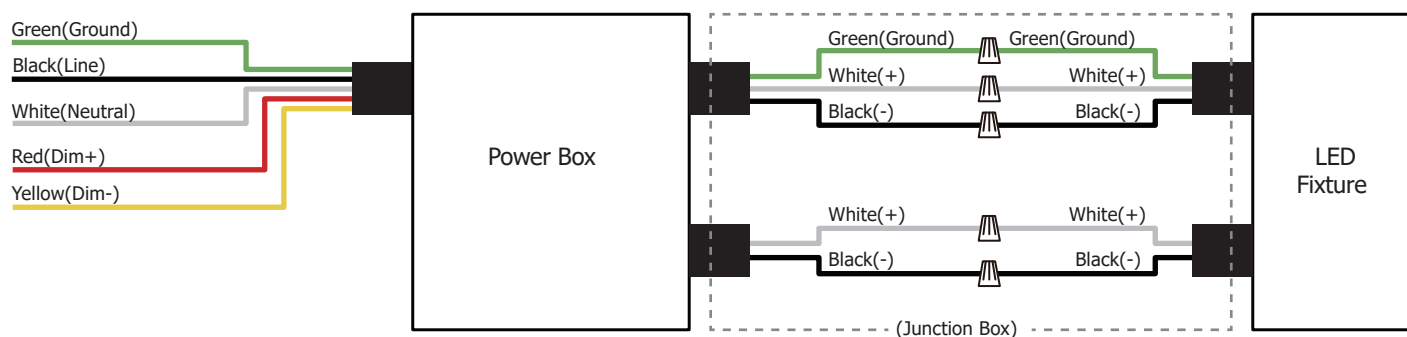


ADVANCED HIGH CEILING Whiz 2.0 - Adjustable Uplight




Wiring Diagram

Superior0-10V Tunable White (WS2.0-150)

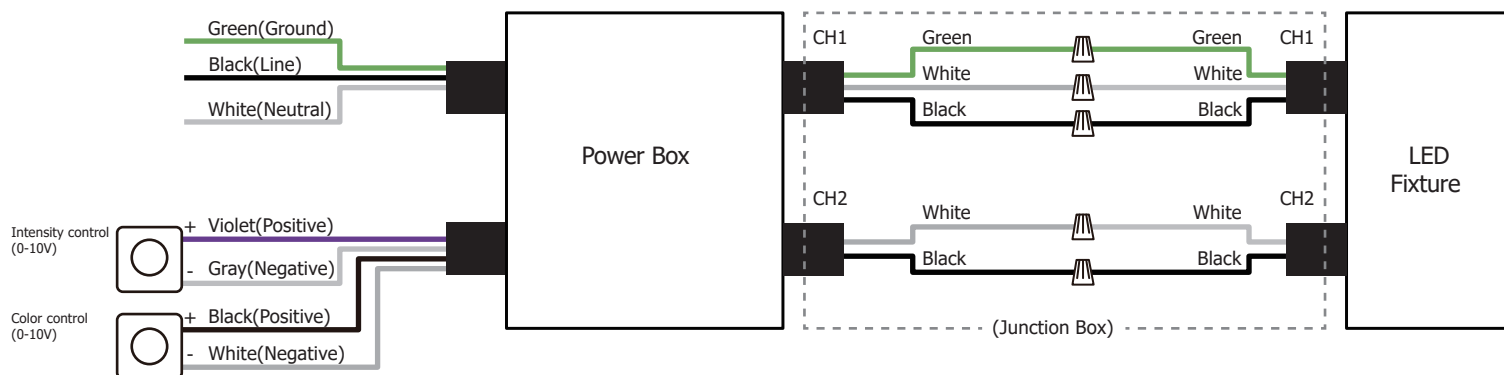


Superior0-10V Tunable White (WS2.0-300)

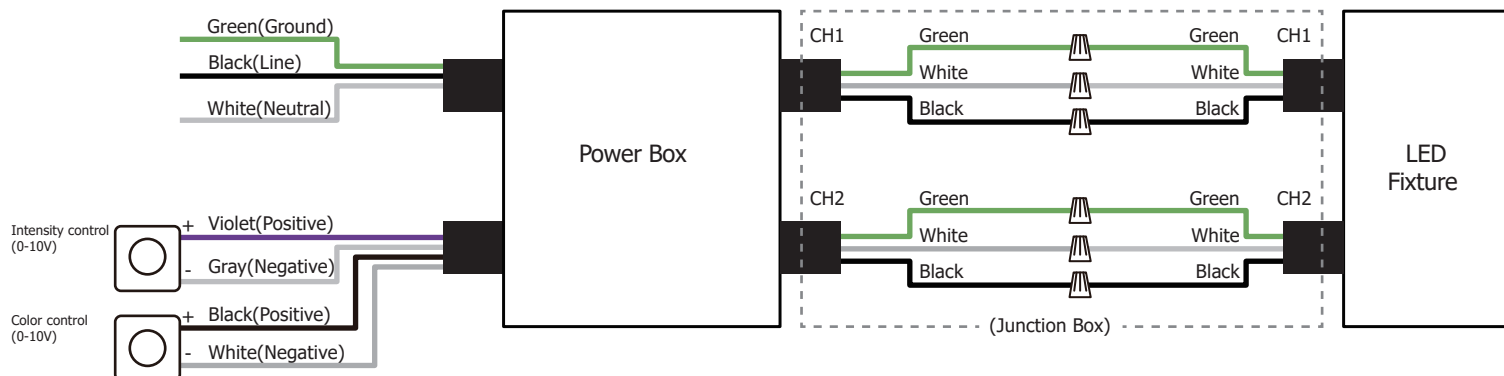

Wiring Diagram


DMX

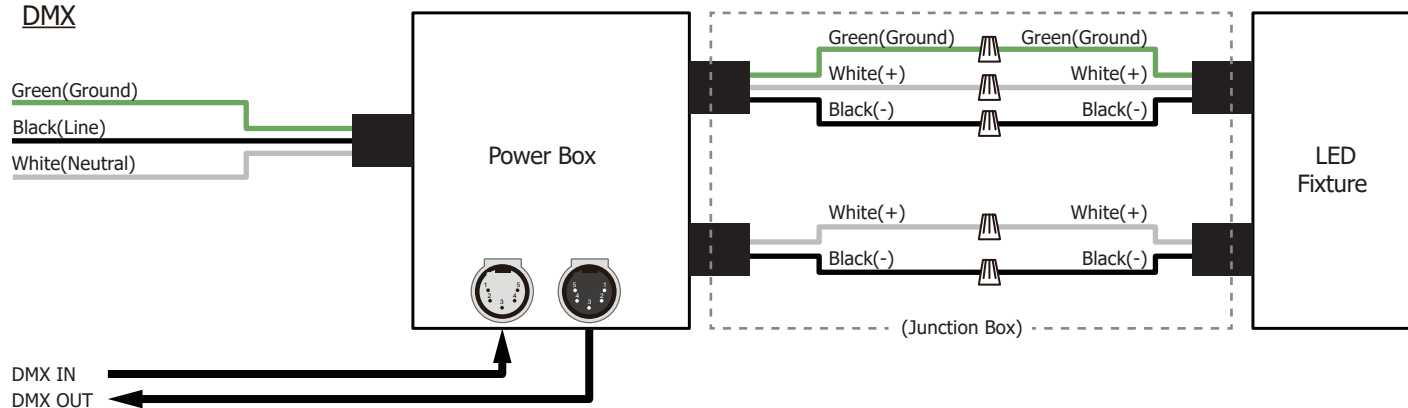



ADVANCED HIGH CEILING Whiz 2.0 - Adjustable Uplight

METEOR

DMX Tunable White (WS2.0-150)

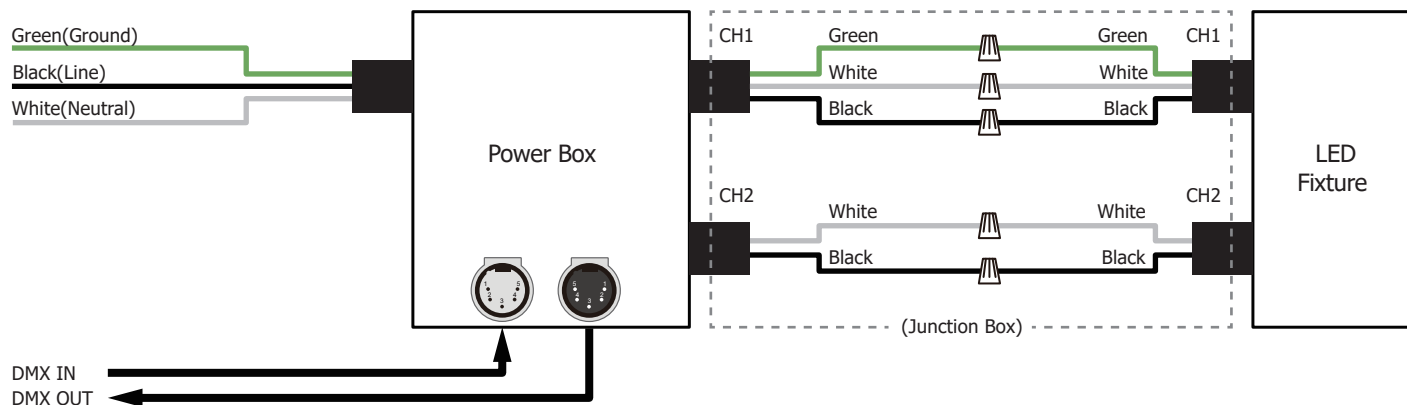

DMX Tunable White (WS2.0-300)

 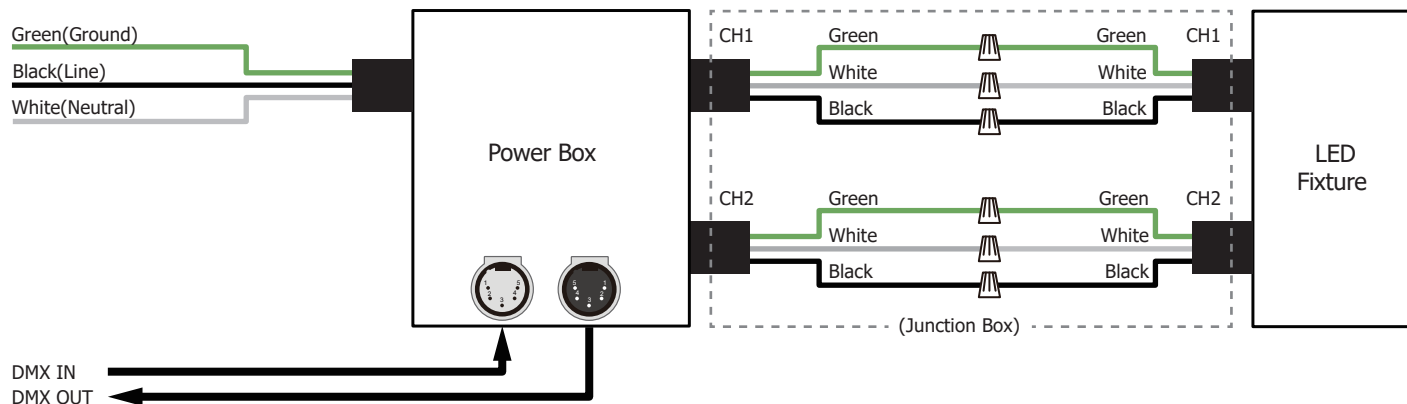

DMX IN DMX OUT

XLR Socket

CONNECTION	5-PIN XLR
Common	PIN 1
Signal -	PIN 2
Signal +	PIN 3
Spare	PIN 4
Spare	PIN 5

*The last fixture has to be terminated with a DMX Terminator (by others).

DMX512 is connected using a daisy-chain methodology where the source connects to the input of the first device, the output of the first device connects to the input of the next device, and so on.