



FOR FIELD ASSISTANCE PLEASE CALL +1-213-255-2060 #4


- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- · All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




BOLT WIRE GUARD




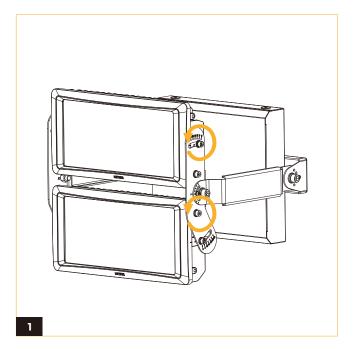

Loosen the aiming bolts to unclasp the fixture.

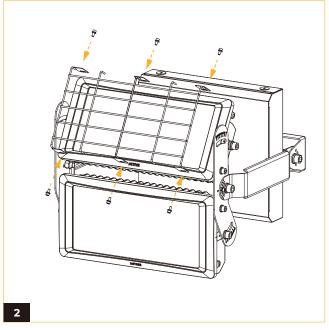

Tilt the lighthead module just enough to secure the Wire Guard on top and below the module using the screws provided.

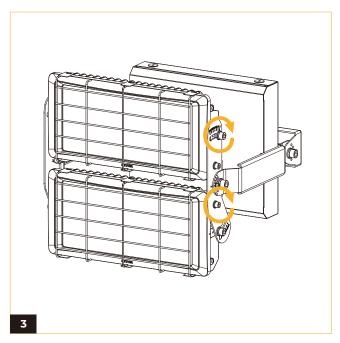

Adjust the fixture back to the desired angle and tighten aiming bolts.