
INSTALLATION GUIDE SURFACE ADJUSTABLE MOUNT

# **DOT 2**

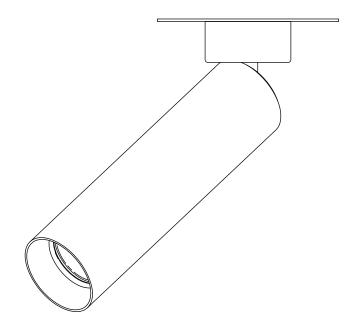



- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with Electrical Code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




meteor-lighting.com


### INSTALLATION GUIDE

### DOT 2 SURFACE ADJUSTABLE MOUNT


## METE<sup>O</sup>R

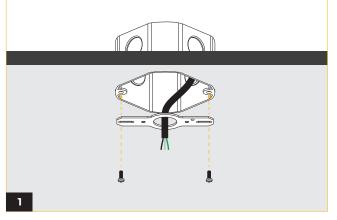


Secure the crossbar to junction box (by others), using two phillips screws.

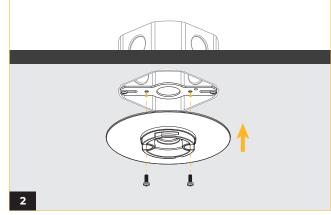


Screw the surface adjustable mount plate onto the bracket in the two holes indicated.

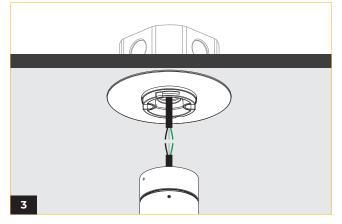

Refer to the wiring diagram for connection to the junction box.

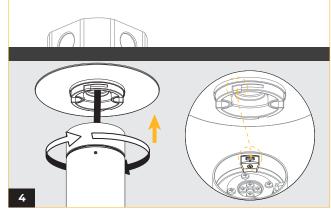

Align the bottom part of the fixture with the surface mount plate by matching the U-shaped openings.

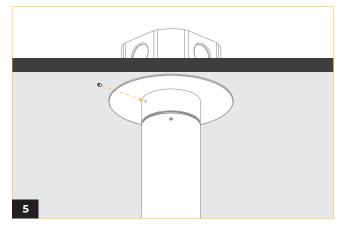


Secure fixture with hex screw.




#### WIRING DIAGRAM

### 0-10V / Superior 0-10V

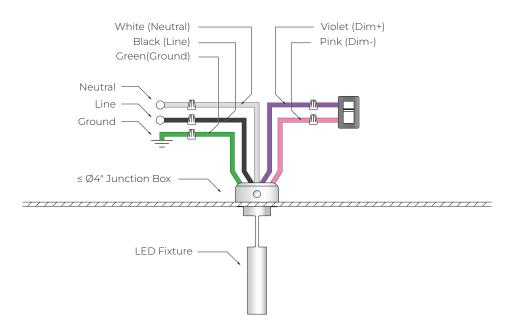

\*Not to Scale

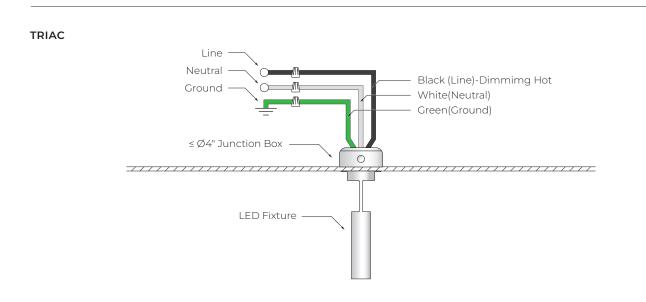

\*Not to Scale