



FOR FIELD ASSISTANCE PLEASE CALL +1-213-255-2060 #4


- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- · All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




NOVALINK DOWNLIGHT BLADE




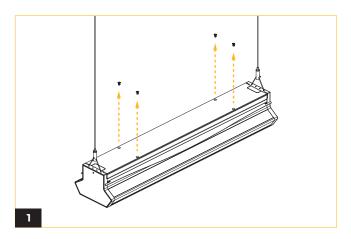


Remove the four screws from the top cover and carefully lift the cover upward.

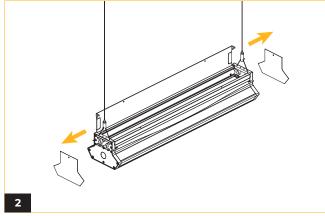


Remove the front and rear cover plates, which are held in place by magnets.

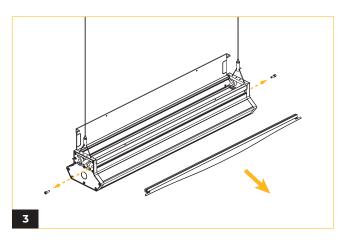


Loosen the mounting screws and carefully remove the diffuser. Handle with care to prevent scratches or damage.

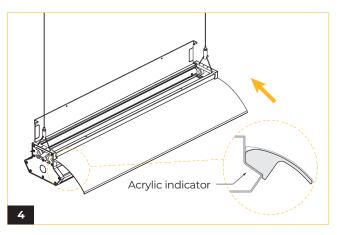

Slide the downlight blade into the groove, using the acrylic indicator to position it at the correct angle.

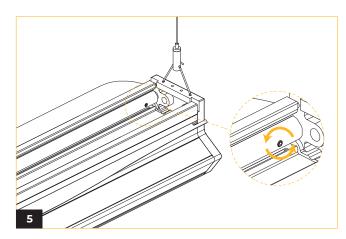

Ensure the blade angle aligns with the indicator, then secure it in place by fastening the screws from the inside.

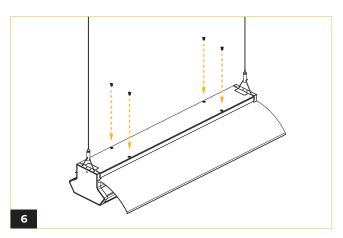

Reinstall the top cover by fastening the four screws.