


REV FLEX 4 & 6

INSTALLATION GUIDE
RETROFIT

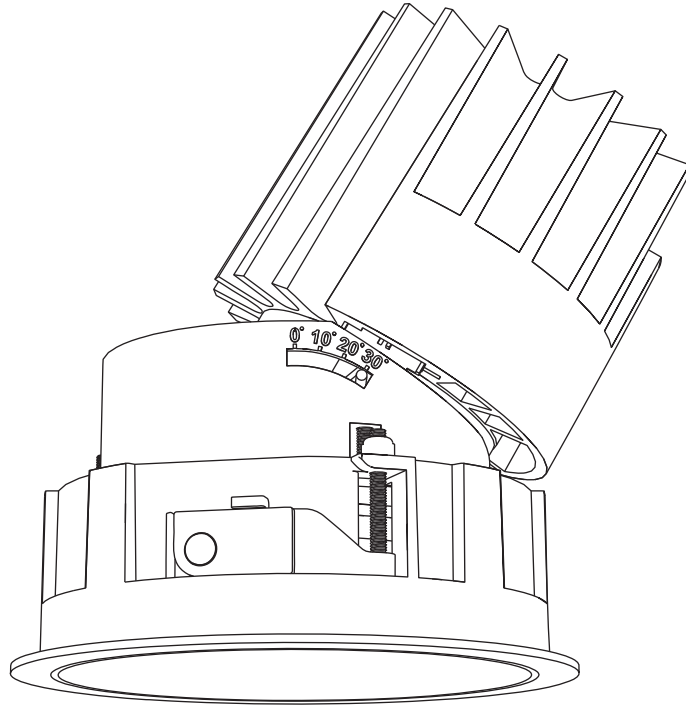 


IMPORTANT SAFETY INFORMATION READ AND FOLLOW ALL SAFETY INSTRUCTIONS


FOR FIELD ASSISTANCE PLEASE CALL
+1-213-255-2060 #4

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

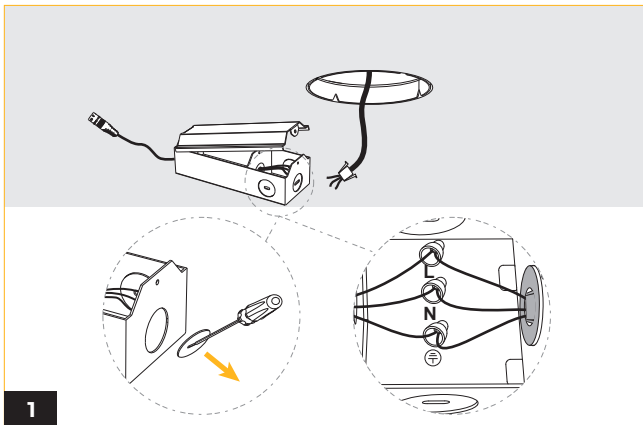


1 Remove knockout and establish connections between the power box and the electrical connection. (Refer to wiring diagram)

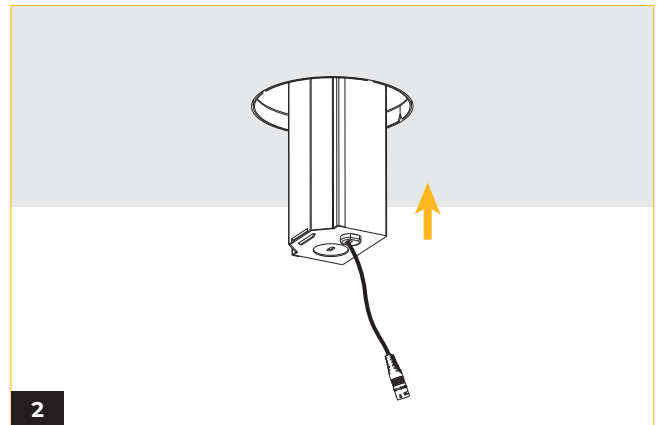

 2 Install the power box through the ceiling and position it in a location that has adequate clearance.

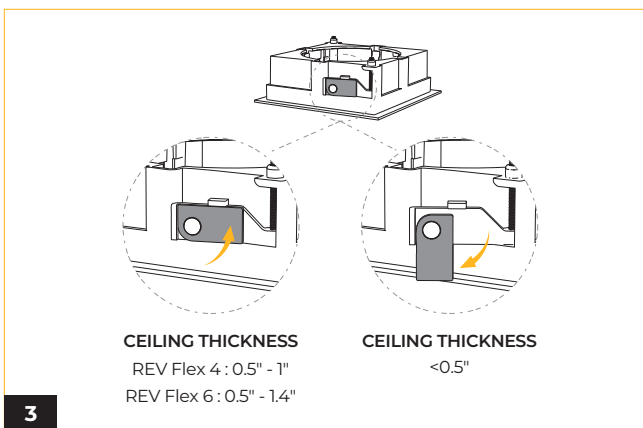


3 Align the mounting tabs to the appropriate position according to ceiling thickness.

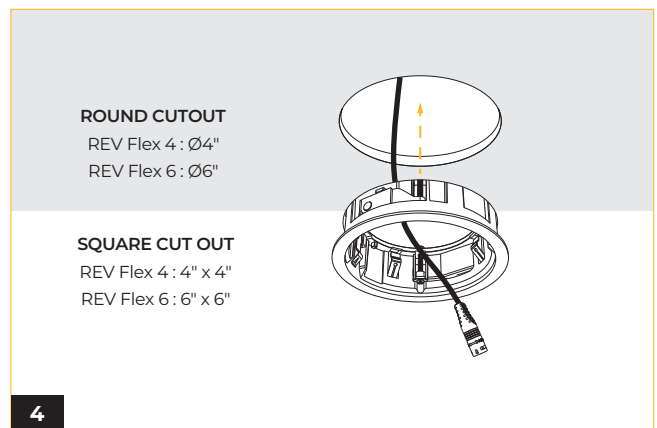


4 Insert the frame through the ceiling cut out.


**For installation of other types of bezels and trims, read the other sections of the manual for specific instructions.*

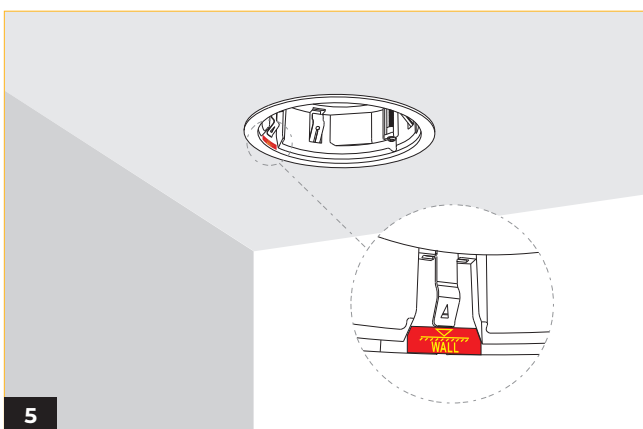


5 For wallwash bezel installation, align the red labeled indicator so that it faces towards the wall.

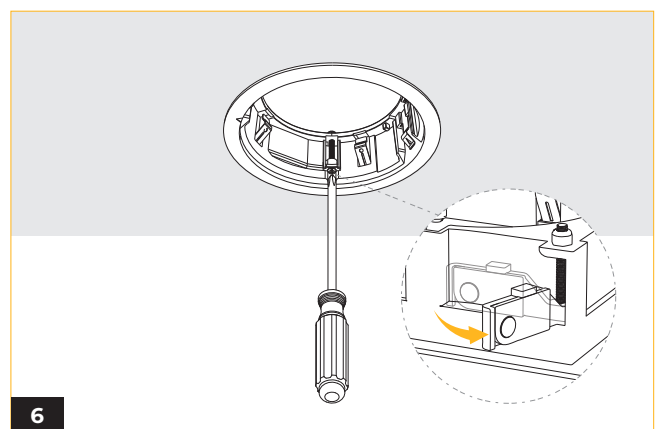


6 Use a Phillips screwdriver to expand the two mounting tabs and secure the bezel frame in place.

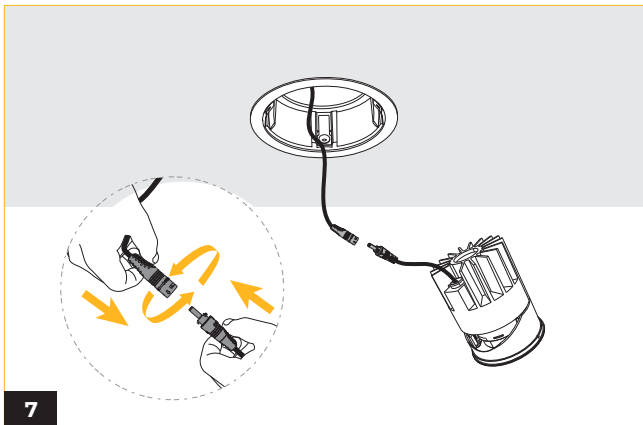


Establish the electrical connection between the power box and the fixture using a quick-connect wire connector. Plug the connector into place and twist until it is secure.

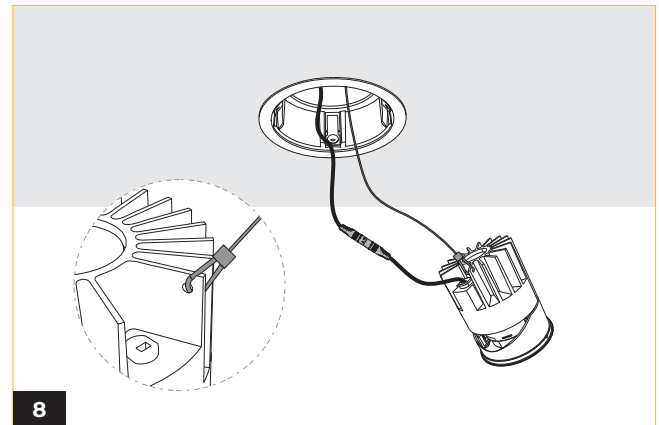


For REV Flex 6, a safety cable is included and attached to the bezel frame. Hook the other end of the cable to the hole located next to the power cable on the light engine.

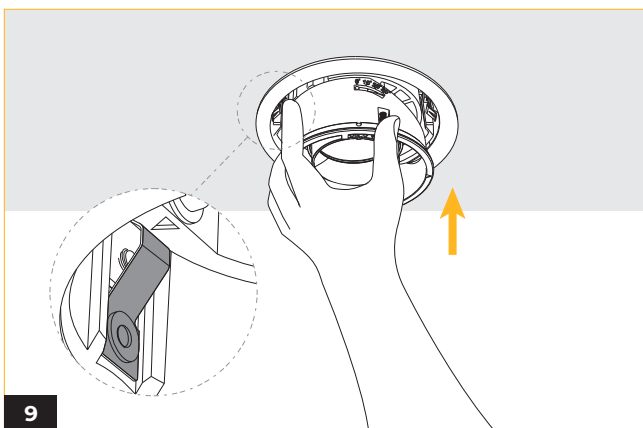


Install the light engine from below ceiling until it is securely fastened by the springs on the bezel frame. The secure engagement should produce a distinct clicking sound, indicating proper installation.

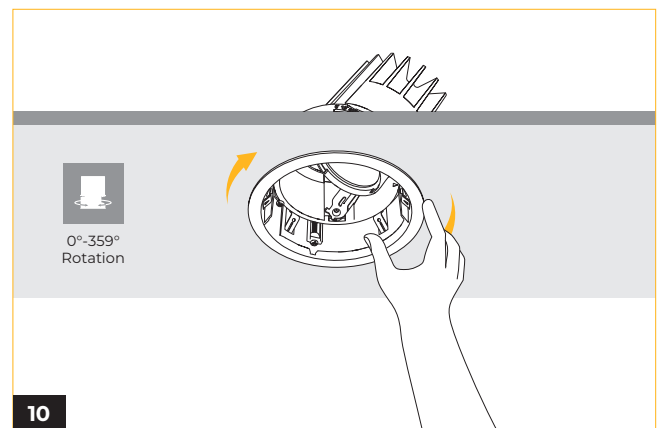


Direct the light in the desired direction by rotating the fixture.

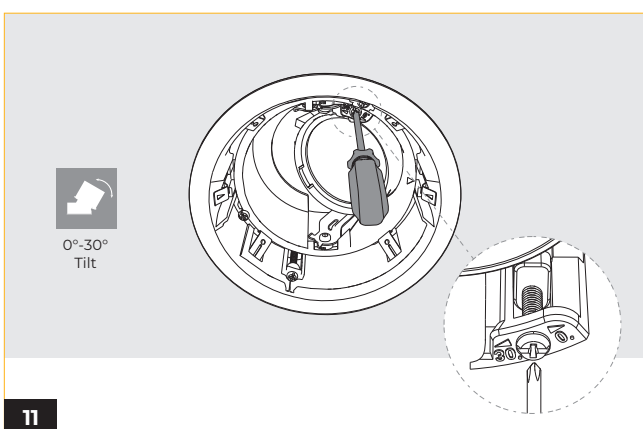

 Use a Phillips screwdriver to adjust the screw and change the tilt of the fixture to direct the light to the desired location.

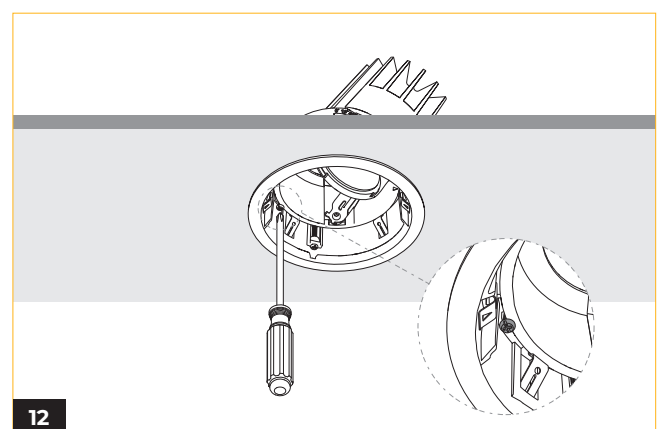


After setting the fixture to the desired direction, use a Phillips screwdriver to tighten the screw located between the bezel frame and the light engine, thus preventing any rotation of the fixture.

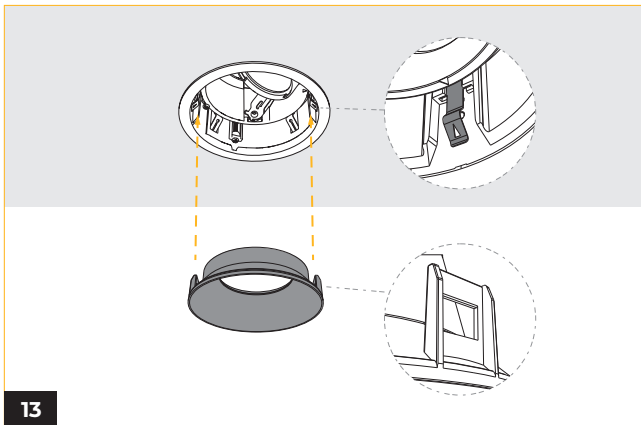


13

Install the trim by aligning the two clip inserts with the springs on the bezel frame. Push the trim into place until it is firmly secured by the springs on the bezel frame.

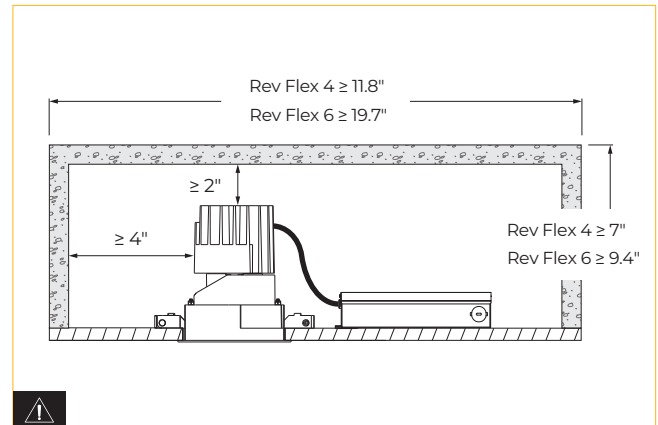


⚠


Maintain an adequate amount of clearance around the lighting fixture to ensure proper heat dissipation.

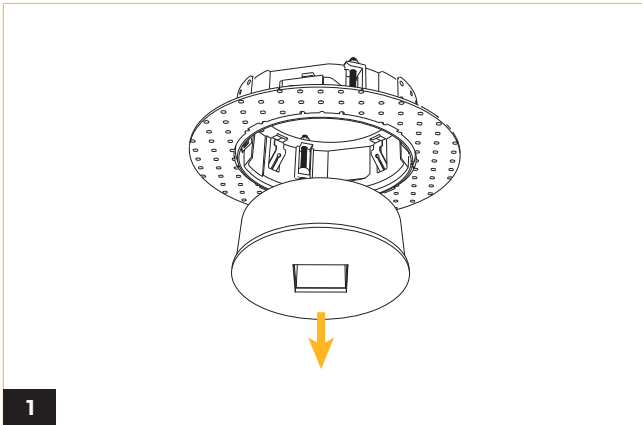


1 Remove the protective foam from the frame and retain it for later use.

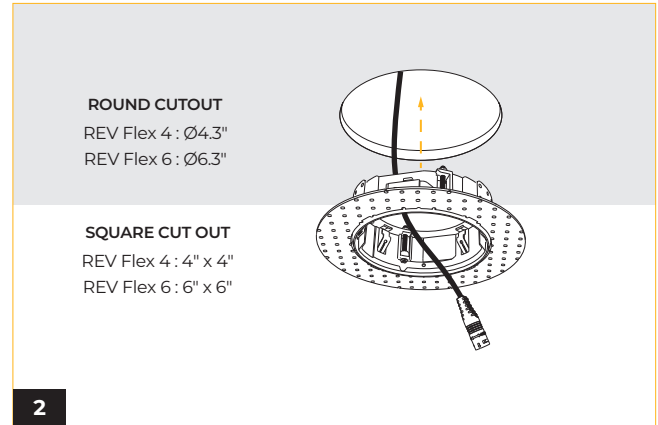


2 Insert the frame through the ceiling cut out.

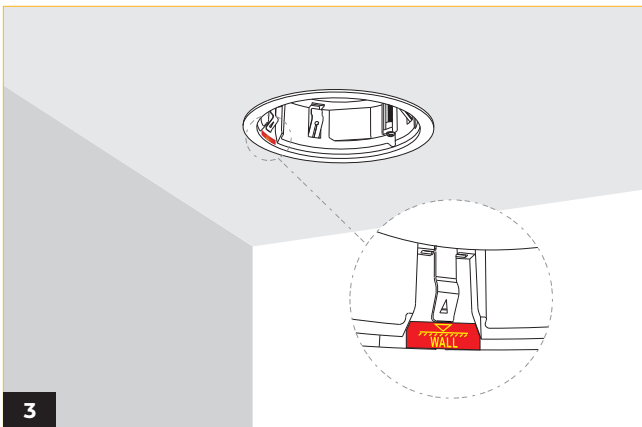


3 For wallwash bezel installation, align the red labeled indicator so that it faces towards the wall.

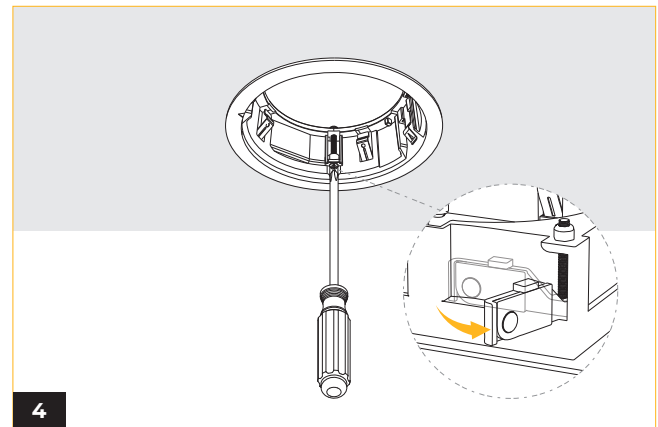


4 Use a Phillips screwdriver to expand the two mounting tabs and secure the bezel frame in place.

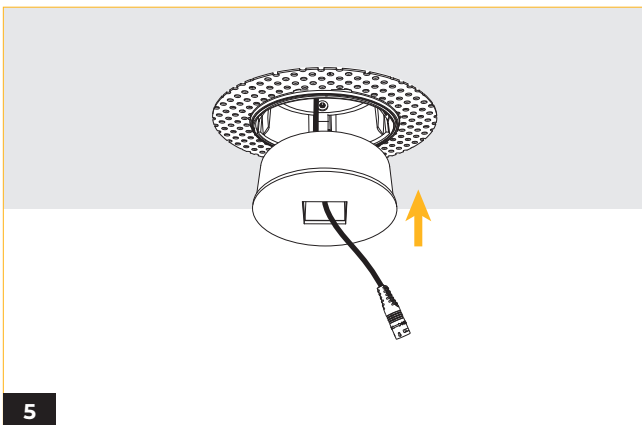


5 Place the protective foam back into the frame.

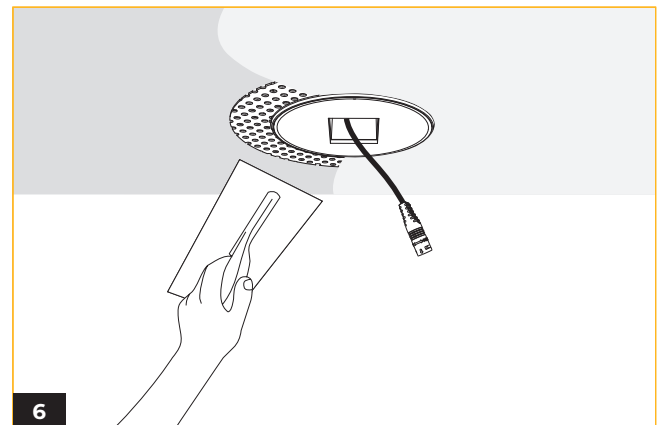


6 Spread the plastering compound evenly around the frame and smooth it out to create a flat surface on the ceiling. Once finished, remove the protective foam and proceed with the rest of the installation.

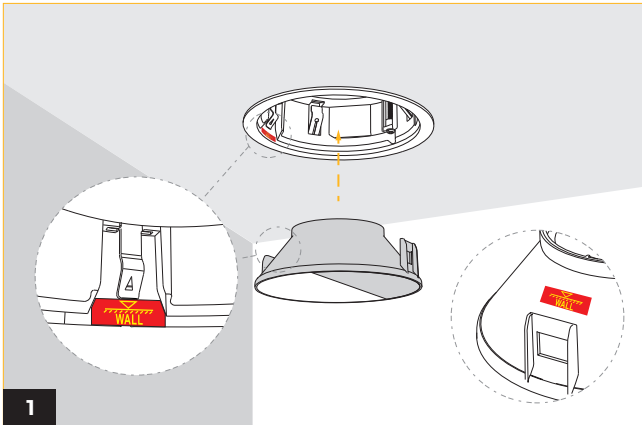

Align the wallwash bezel with the frame, make sure that the red labeled indicator on the frame and the wallwash bezel align with each other for proper direction during installation.

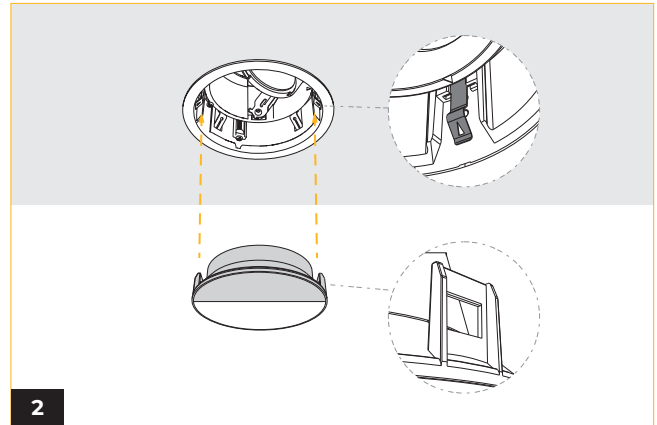


Install the trim by aligning the two clip inserts with the springs on the bezel frame. Push the trim into place until it is firmly secured by the springs on the bezel frame.

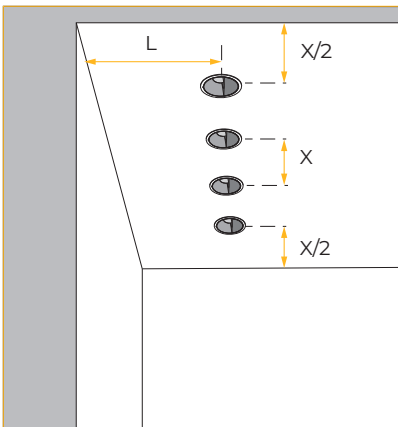


REV Flex 4 & 6 Round															
L (inch)	20"	24"	26"	28"	30"	32"	34"	36"	38"	40"	42"	44"	46"	48"	50"
X (inch)	20"	24"	26"	28"	30"	32"	34"	36"	38"	40"	42"	44"	46"	48"	50"

Our recommended installation distances between fixtures for achieving a uniform lighting effect.

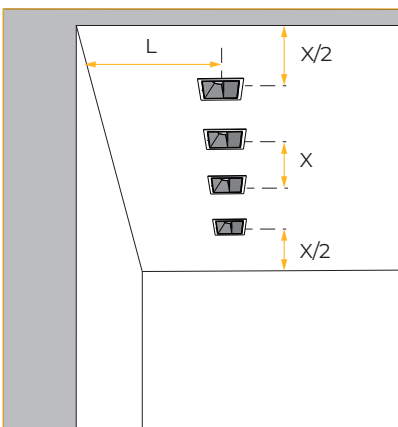


REV Flex 4 & 6 Square															
L (inch)	20"	24"	26"	28"	30"	32"	34"	36"	38"	40"	42"	44"	46"	48"	50"
X (inch)	24"	26"	28"	30"	32"	34"	36"	38"	40"	42"	44"	46"	48"	50"	52"

 
Our recommended installation distances between fixtures for achieving a uniform lighting effect.

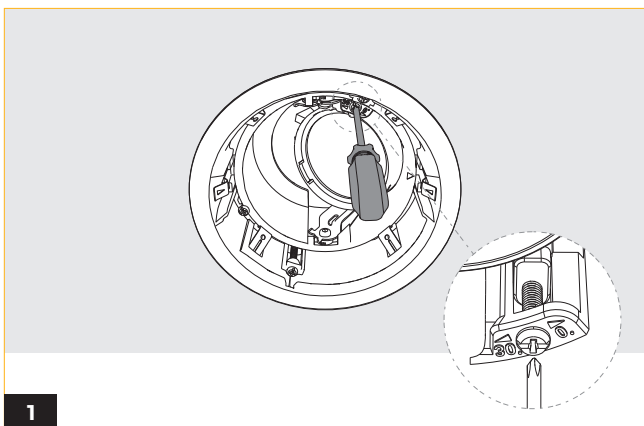


Use a Phillips screwdriver to adjust the screw and change the tilt of the fixture to 0 degrees.

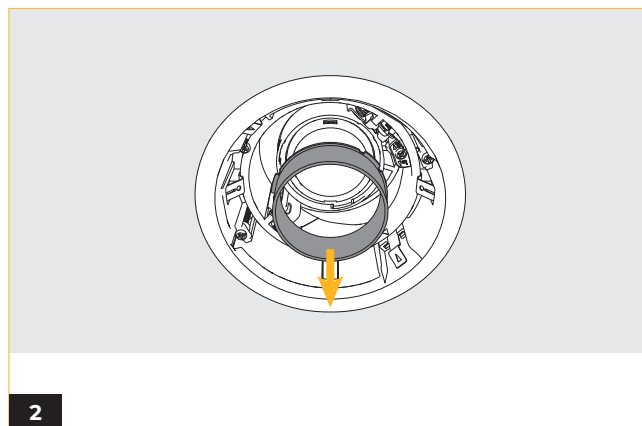

Remove the anti-glare shield by applying pressure to its sides until the clip mechanism releases.

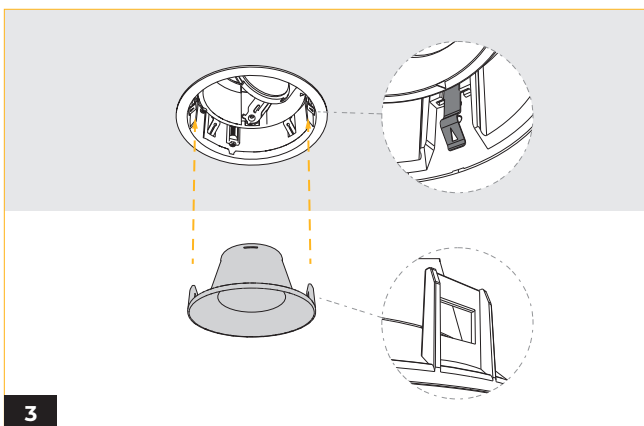

Install the trim by aligning the two clip inserts with the springs on the bezel frame. Push the trim into place until it is firmly secured by the springs on the bezel frame.

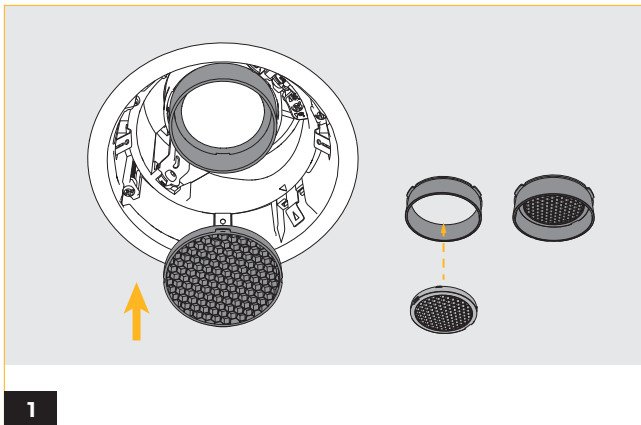


1
Install the honeycomb louver by inserting it into the anti-glare shield until it is firmly secured by the clip mechanism


WIRING DIAGRAM

SPV

 
*Not to scale

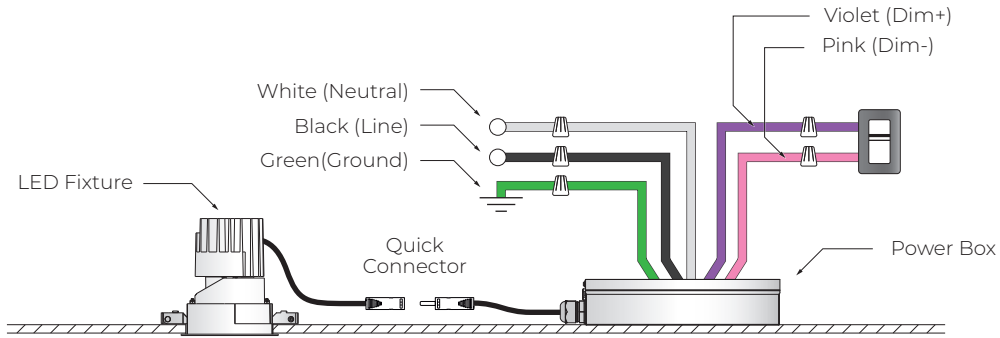

TRC

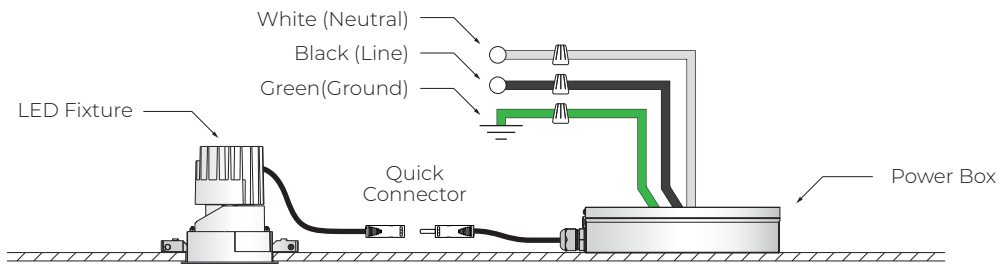



DALI

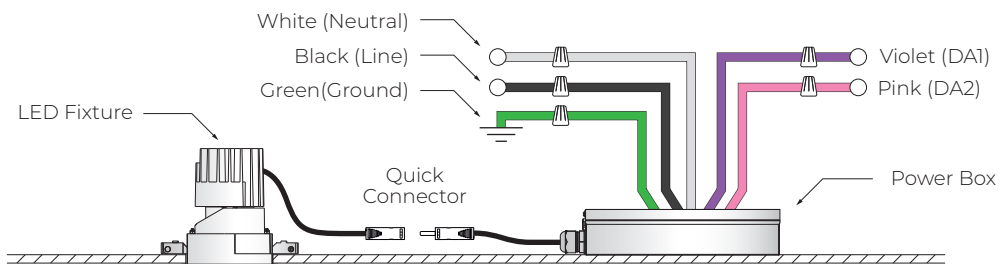


WIRING DIAGRAM

DMX Static White

*Not to scale

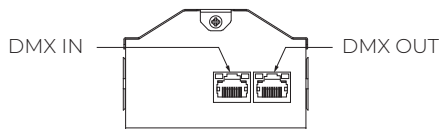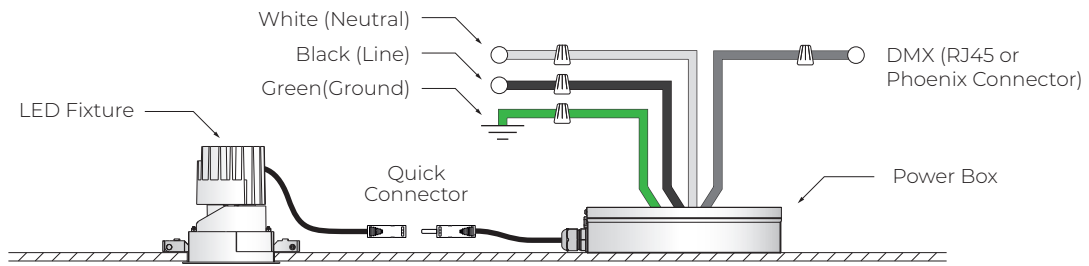

RJ45 Sockets


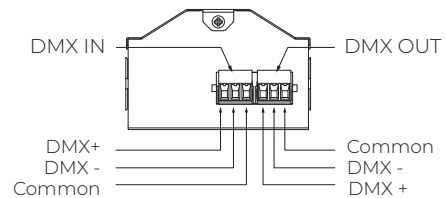


Phoenix Connector


WIRING DIAGRAM

DMX (W+RGB/Tunable White)


*Not to scale

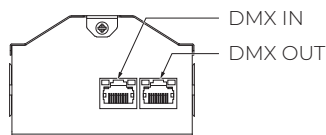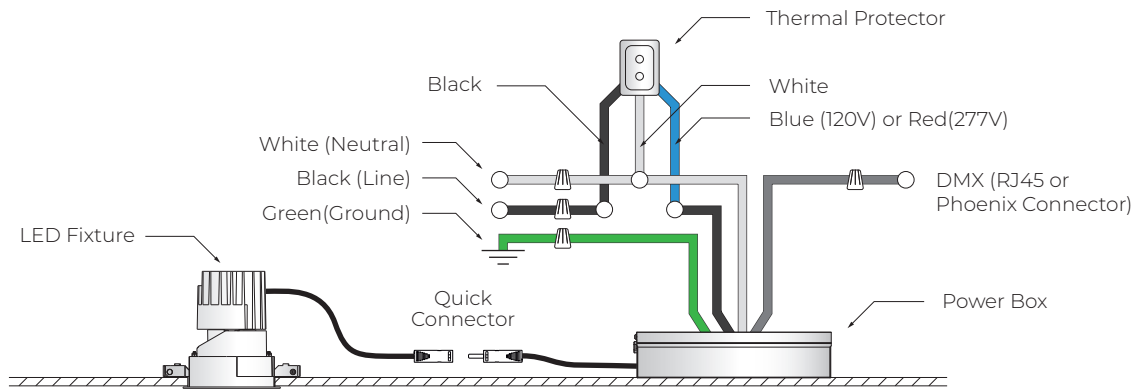

RJ45 Sockets

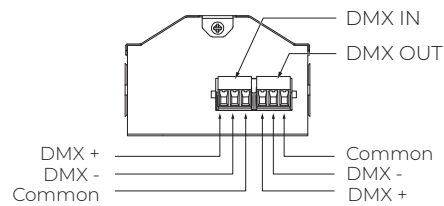

Phoenix Connector

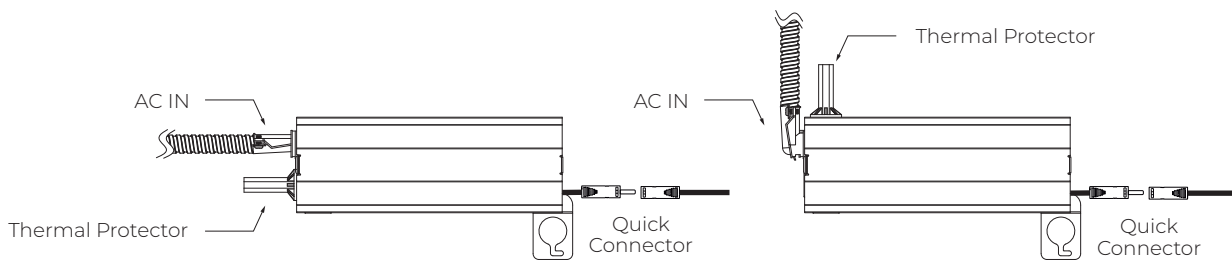

Thermal Protector Position

To facilitate the fitting of the power box through the ceiling cutout, adjust the position of the thermal protector as shown.