
O.S ZIHW



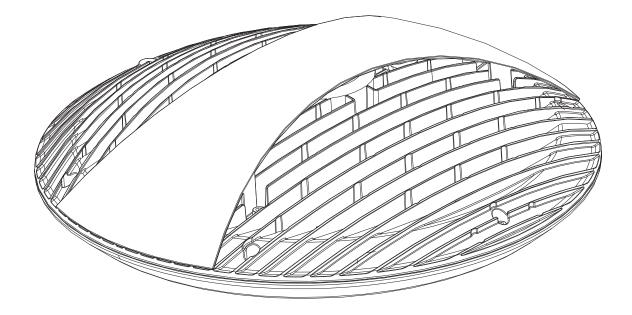

FOR FIELD ASSISTANCE PLEASE CALL +1-213-255-2060 #4

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- · All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE





meteor-lighting.com

INSTALLATION GUIDE


WHIZ 2.0 STEM MOUNT

METE^OR

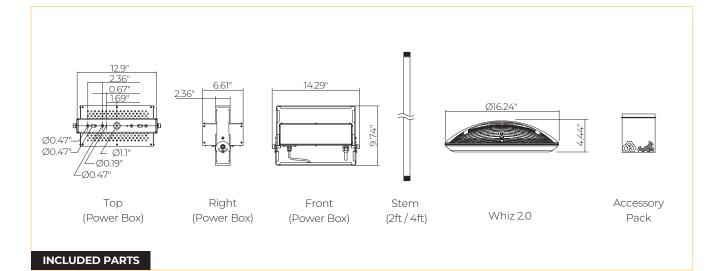


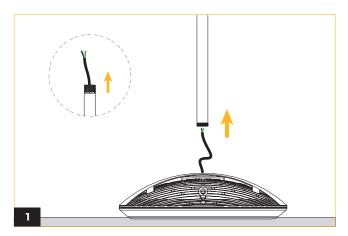


Fixture cables go through the stem and all the way through.

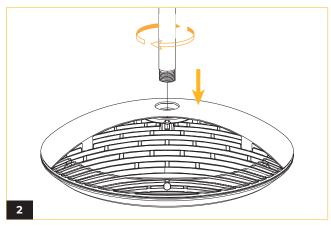

Screw stem in place.

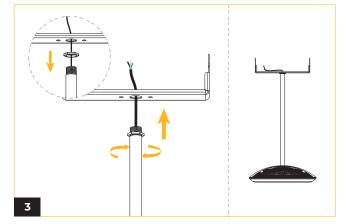

First, push the cables through a Hex screw and tighten on stem grooves. Second, fasten the stem onto the lower bracket.

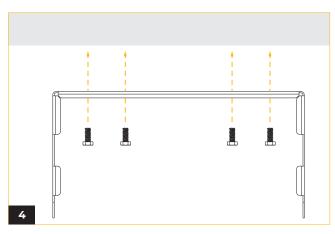


Fasten the top bracket on the desired location on the ceiling.

meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.


INSTALLATION GUIDE

WHIZ 2.0 STEM MOUNT


METEOR

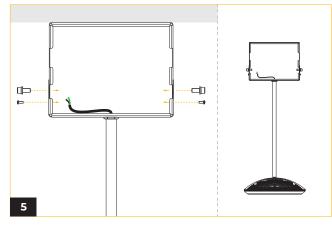


Align both lower and upper brackets and fasten in place.

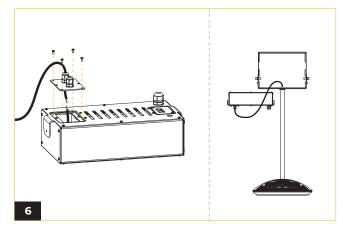


Unscrew the DC junction box and loosen the cable clamp. Insert the FC wire through the cable clamp and connect them to the wires in the junction box. Refer to wiring diagram for detailed explanation of wiring diagram.

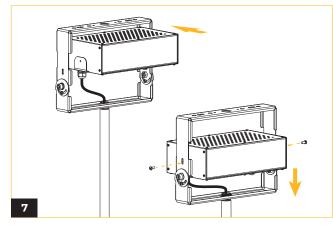

Slip the power box hook fastener over the lock-in grooves allocated and fasten screws on either side to keep the power box in place.

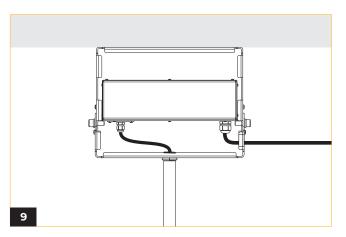


Connect AC Cable to Junction Box.

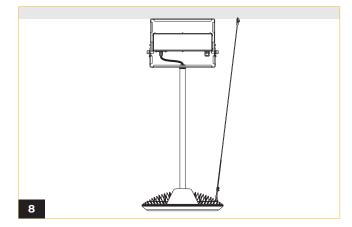


Hook the safety cable.



STV 0-10V (120W/170W/240W)

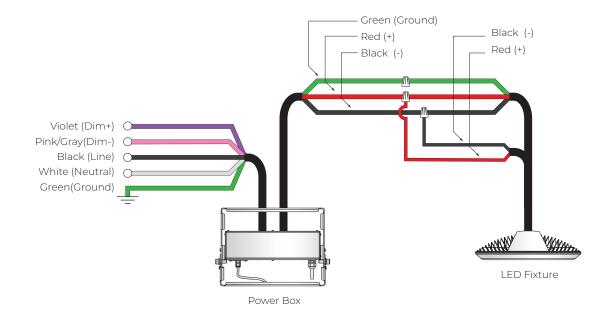


STV 0-10V (300W)

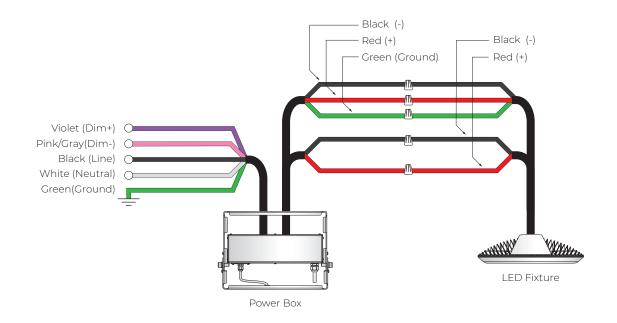


meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.



SPV 0-10V

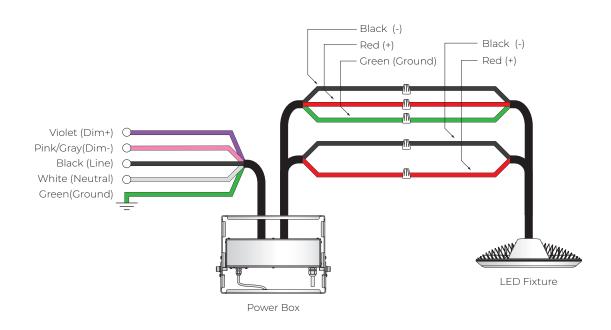


SPV 0-10V (Tunable White) 150W

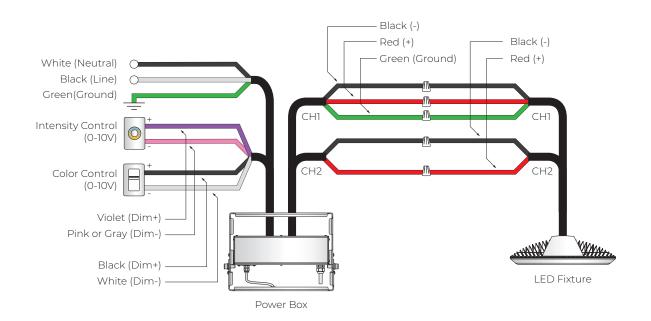


WHIZ 2.0 WIRING DIAGRAM

METE^OR

WIRING DIAGRAM

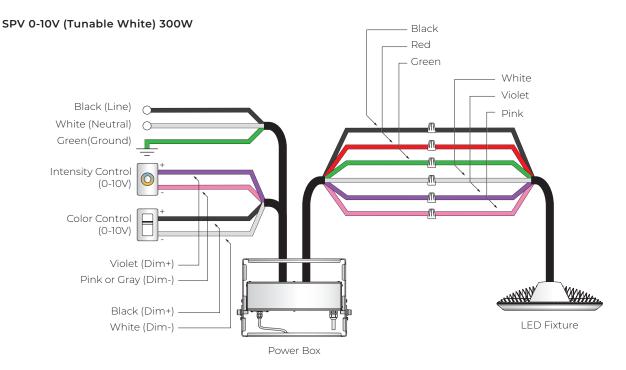

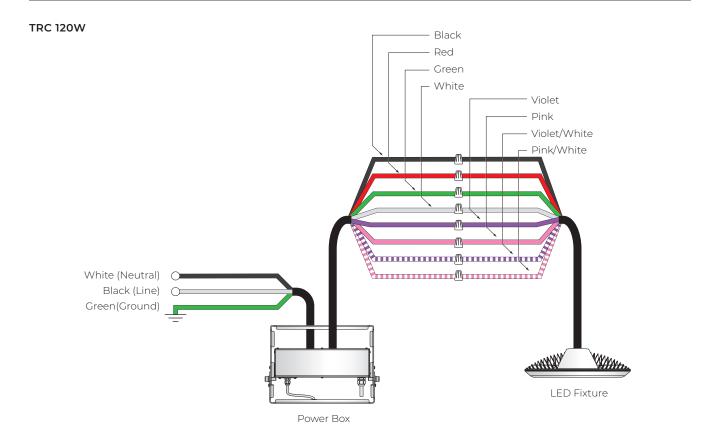


meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060


Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.




DMX

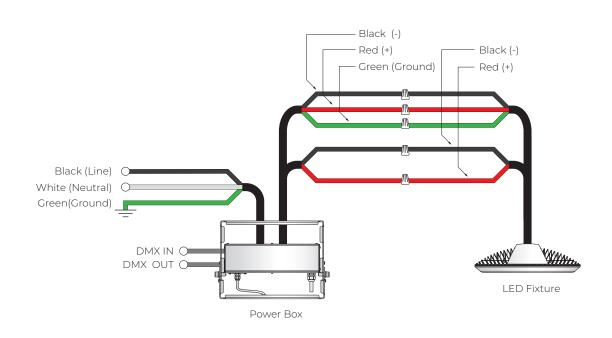


DMX (Tunable White) 150W

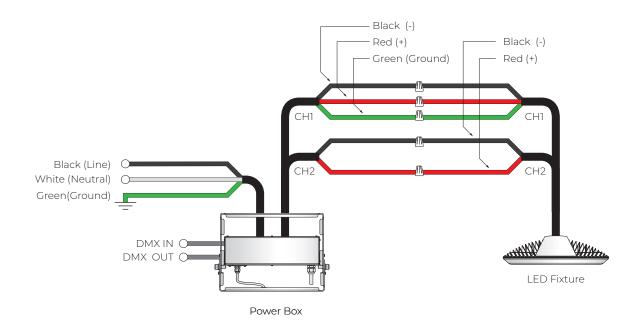



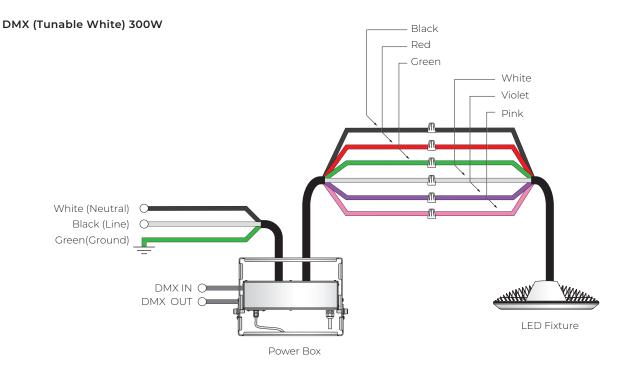


DMX (W+RGB)

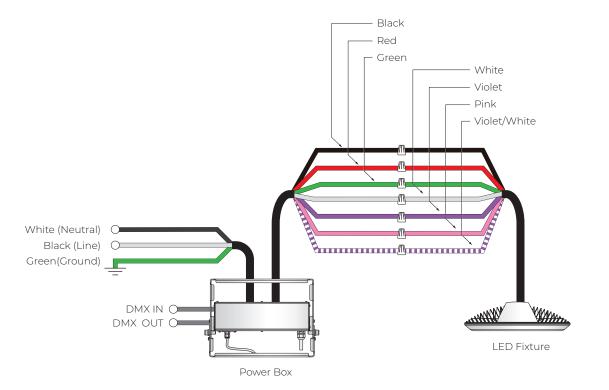




DMX RJ45

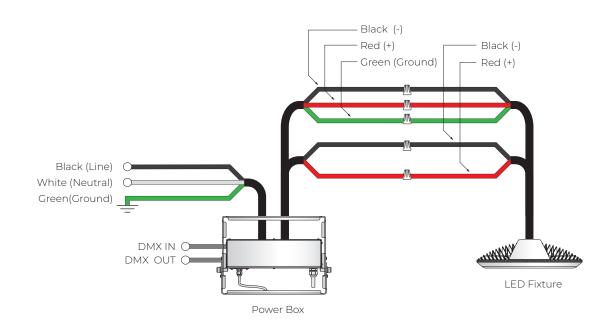


DMX RJ45 (Tunable White) 150W

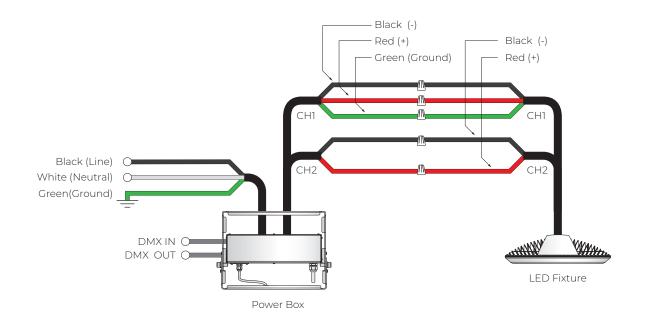

meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc.



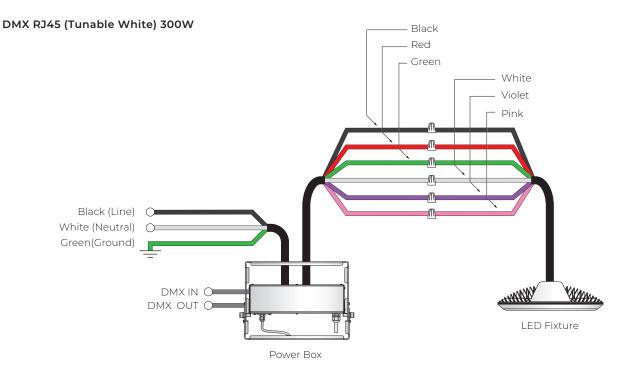

 meteor-lighting.com
 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060

 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. @Meteor Illumination Technologies, Inc.

 07-02-2024

WHIZ 2.0

METE^OR

WIRING DIAGRAM

Application note : Wiring for DMX/RDM lighting systems

DMX/RDM is a robust and reliable system for lighting control. However, if not implemented correctly, problems can arise such as random flashing of lights, erratic operation and delays in responding to commands. This document explains the best practices in DMX wiring.

Important things to consider are:

- 1. DMX is a three-wire system. Use all three!
- 2. DMX is based on the EIA-485/RS-485 standard.
- 3. Always use cable specifically designed for DMX / RS-485. These cables have an impedance of 120Ω and a low capacitance. For instance : Belden 9729.
- 4. DMX must be terminated with a 120Ω resistor to prevent reflections.
- 5. A daisy chain topology should be used.
- 6. After 32 unit loads a repeater/booster should be used. (Important : For tunable white fixtures, After "32" unit loads a repeater/booster should be used.)
- 7. Keep cabling below 200 meters between the controller and the last driver.
- 8. It is generally considered good practice to provide separate DMX in and DMX out / DMX Thru connections to your fixture to aid in installation. This can be in the form of pigtails, RJ-45 connectors or 5-pin XLR connectors.
- 9. Use twisted pair cables with an impedance of 120Ω and a low capacitance.
- 10. UTP Cat5 or Cat6 network cable can also be used but have a slightly lower impedance of 100Ω .
- 11. If shielded cable is used, only connect shield to ground on one side (typically, the controller should have its shield terminal connected to ground).
- 12. Not following the above recommendations may seem to work at first, but can cause problems. Sometimes after weeks of seemingly normal operation.