




- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- · All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with Electrical Code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




WHIZ 2.0 UP & DOWNLIGHT ADJUSTABLE CABLE



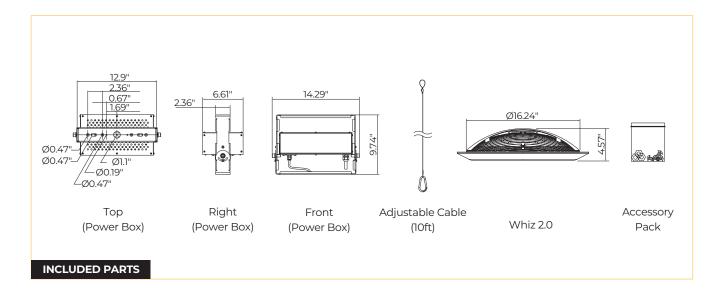

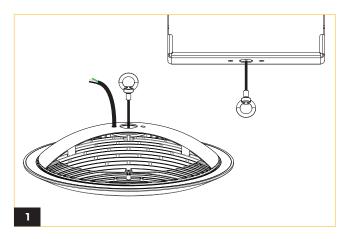


Fasten the 2 hook rings available in the accessory pack to both the fixture and lower bracket.

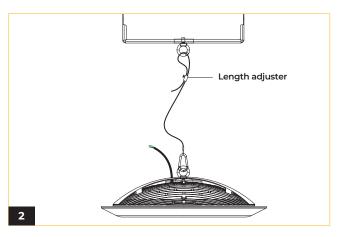

Loop the adjustable cable through the length adjuster looping and fastening at the desired height.




Attach the fixture cables through the lower bracket.

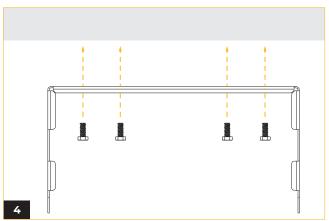


Fasten the top bracket on the desired location on the ceiling.

WHIZ 2.0 UP & DOWNLIGHT ADJUSTABLE CABLE




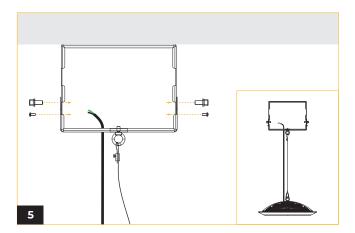

Align both lower and upper brackets and fasten in place.

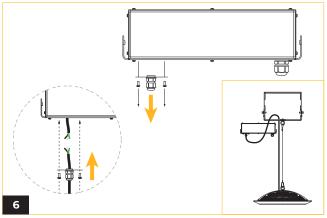


Open the DC Junction box and connect cables. Refer to wiring diagram section. $\,$

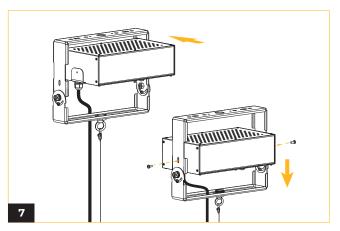

Slip the power box hook fastener over the lock-in grooves allocated and fasten screws on either side to keep the power box in place.



Hook the safety cable.

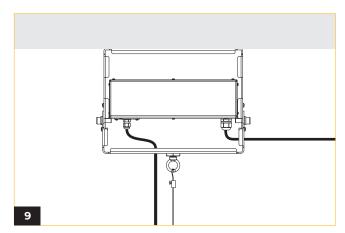


Connect AC Cable to Junction Box.

WHIZ 2.0 UP & DOWNLIGHT WIRING DIAGRAM




WIRING DIAGRAM

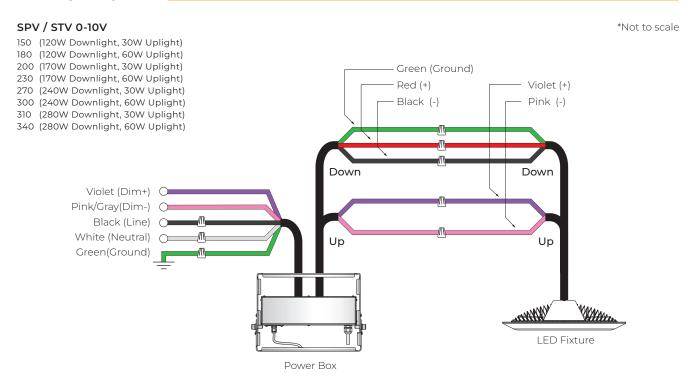

SPV 0-10V (Tunable White)

300 (240W Downlight, 60W Uplight)


*Not to scale

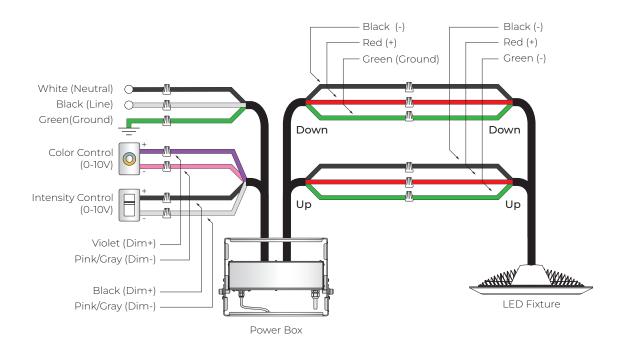

WHIZ 2.0 UP & DOWNLIGHT WIRING DIAGRAM




WIRING DIAGRAM

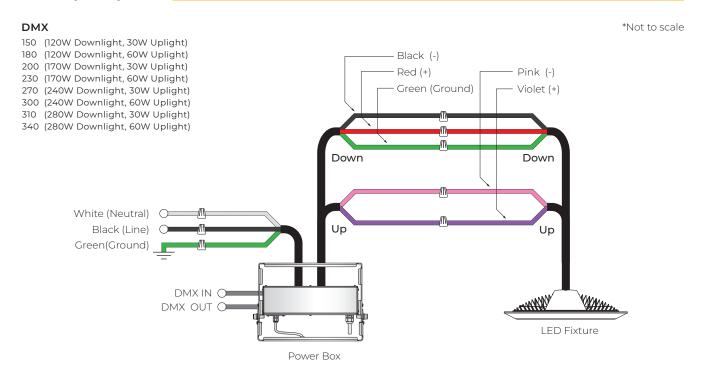

DMX / DMX (Tunable White)

300 (240W Downlight, 60W Uplight)


*Not to scale

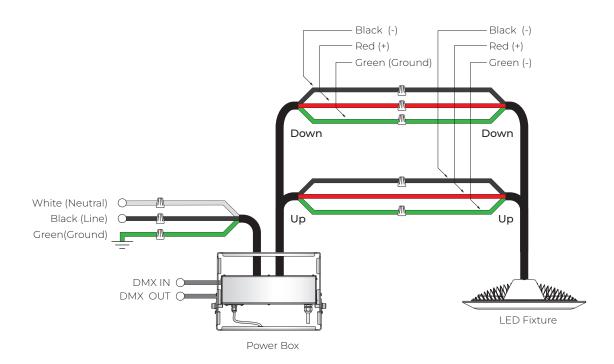

WHIZ 2.0 UP & DOWNLIGHT WIRING DIAGRAM



WIRING DIAGRAM

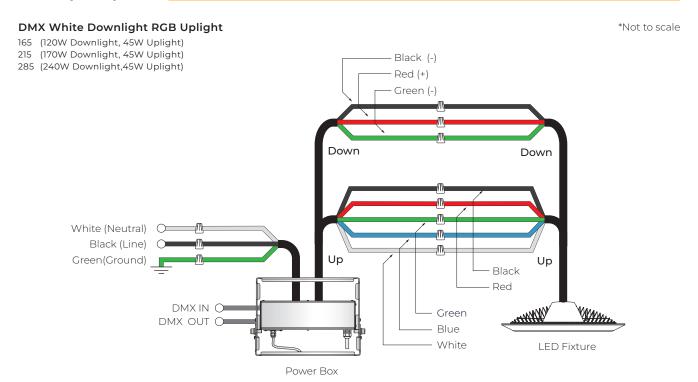

DMX (W+RGB) *Not to scale

300 (240W Downlight, 60W Uplight)

