
BOLT NOVA

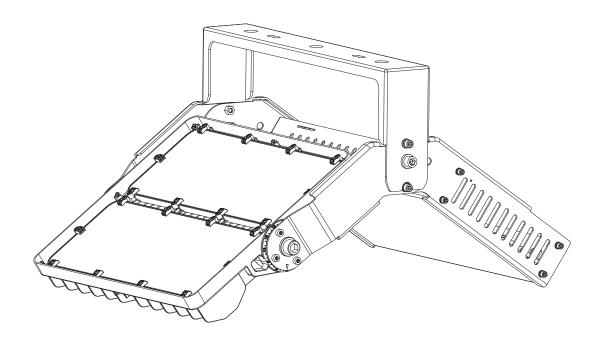



FOR FIELD ASSISTANCE PLEASE CALL +1-213-255-2060 #4

- Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker.
- All servicing or relamping must be performed by qualified service personnel.
- Product must be grounded to avoid potential electric shock or other potential hazard.
- Product must be installed at locations and heights, in a manner consistent with its intended use, and in compliance with electrical code and local codes.


SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE




meteor-lighting.com

BOLT NOVA 700/1050W BRACKET MOUNT


METE^OR

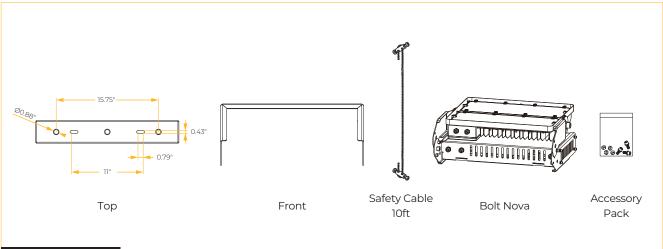


INCLUDED PARTS

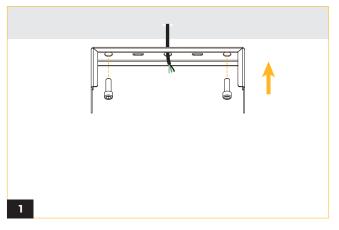


Secure the mounting bracket to a level surface using appropriate mounting hardware capable of supporting the fixture's weight. (700W: 44 lbs, 1050W: 77 lbs)

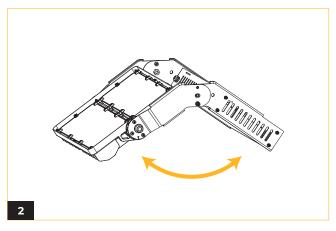

Unfold the luminare body until the screw points are aligned.

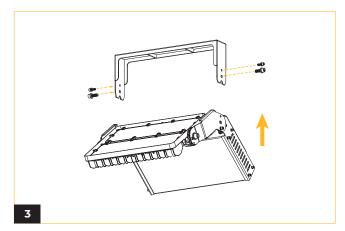


Align the bracket with the luminaire body, and fasten the bracket by using two screws on each side. Ensure that the unfolded body is also securely fixed and remains stable.

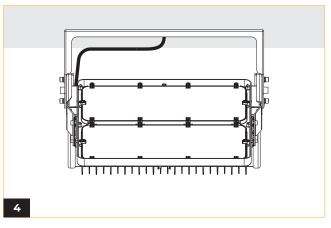

Establish electrical connections between the junction box and the fixture. (Refer to wiring diagram)

METEOR

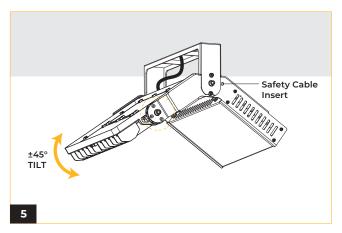


The light engine can be adjusted within a range of ± 45 degrees. To secure the rotated position, tighten the screws on each side.

BOLT NOVA WIRING DIAGRAM




WIRING DIAGRAM


NOD

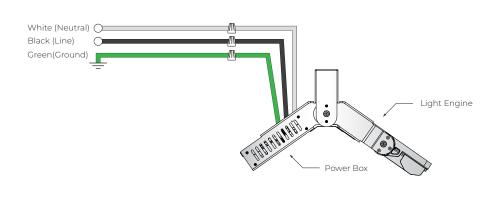

STV 1-10V

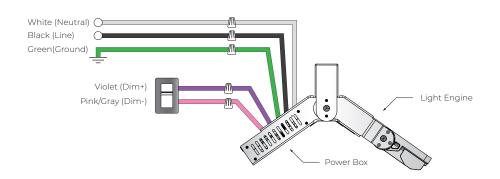

DMX

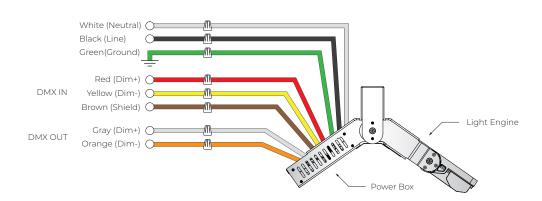

INSTALLATION GUIDE BOLT NOVA WIRING DIAGRAM

METE^OR

WIRING DIAGRAM

Application note : Wiring for DMX/RDM lighting systems

DMX/RDM is a robust and reliable system for lighting control. However, if not implemented correctly, problems can arise such as random flashing of lights, erratic operation and delays in responding to commands. This document explains the best practices in DMX wiring.

Important things to consider are:

- 1. DMX is a three-wire system. Use all three!
- 2. DMX is based on the EIA-485/RS-485 standard.
- 3. Always use cable specifically designed for DMX / RS-485. These cables have an impedance of 120Ω and a low capacitance. For instance : Belden 9729.
- 4. DMX must be terminated with a 120Ω resistor to prevent reflections.
- 5. A daisy chain topology should be used.
- 6. After 32 unit loads a repeater/booster should be used. (Important : For tunable white fixtures, After "32" unit loads a repeater/booster should be used.)
- 7. Keep cabling below 200 meters between the controller and the last driver.
- 8. It is generally considered good practice to provide separate DMX in and DMX out / DMX Thru connections to your fixture to aid in installation. This can be in the form of pigtails, RJ-45 connectors or 5-pin XLR connectors.
- 9. Use twisted pair cables with an impedance of 120 Ω and a low capacitance.
- 10. UTP Cat5 or Cat6 network cable can also be used but have a slightly lower impedance of 100Ω .
- 11. If shielded cable is used, only connect shield to ground on one side (typically, the controller should have its shield terminal connected to ground).
- 12. Not following the above recommendations may seem to work at first, but can cause problems. Sometimes after weeks of seemingly normal operation.

meteor-lighting.com 1860 S Carlos Ave, Ontario, California 91761 E: tech@meteor-lighting.com T: 213-255-2060 Meteor Lighting reserves the right to make changes to this product for design and development improvements at any time without prior notice, and such modification shall be effective immediately. ©Meteor Illumination Technologies, Inc. 07-02-2024