
# METEOR

## IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS


IMPORTANT SAFETY INFORMATION. READ AND FOLLOW ALL SAFETY INSTRUCTIONS. Before wiring to power supply and during servicing or relamping, turn off power at fuse or circuit breaker. All servicing or relamping must be performed by qualified service personnel. Product must be grounded to avoid potential electric shock or other potential hazard. Product must be at locations and at heights and in a manner consistent with its intended use, and in compliance with Electrical Code and local codes.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

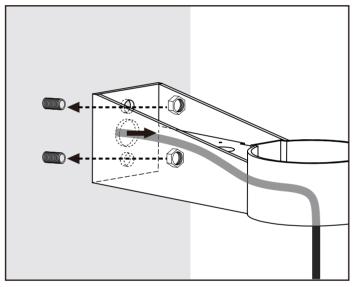

## Step 1

Secure wall mount to surface with mounting hardware (by others) that is sufficient to support weight of fixture. Route AC cable through center hole on wall mount.

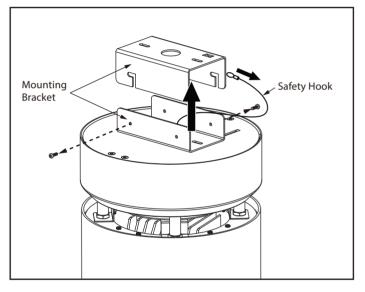


#### Step 2

Loosen the screws that secure the mounting brackets as well as the safety hook. Then detach the upper mounting bracket.


\*METEOR LIGHTING reserves the right to make changes to this product at any time without prior notice and such modification shall be effective immediately.



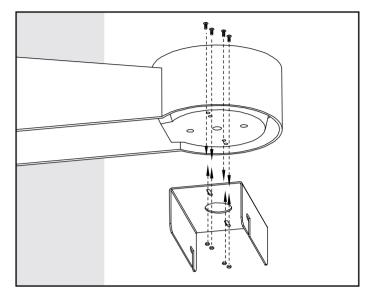


#### Step 3

Secure upper mounting bracket to wall mount with provided screws.

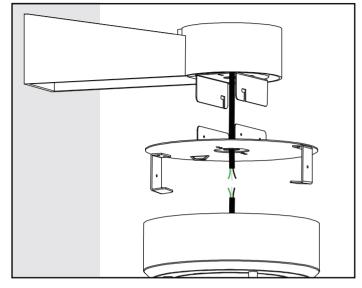


## Step 4

Route AC cable through center hole that runs through wall mount and upper mounting bracket. Connect AC cable with wires from fixture. Please refer to circuit diagram on P3.

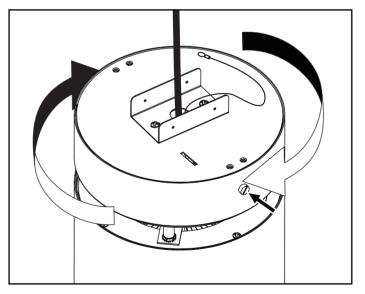

### Step 5

Fasten Top Plate to fixture until latches on Top Plate and inside fixture are aligned. Insert screw into hole and secure.

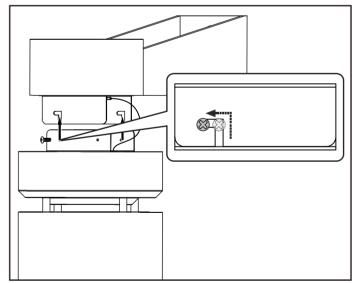

## Step 6

Fasten fixture to wall mount by aligning upper mounting bracket with lower mounting bracket and safety cable to the top of the fixture, slide to lock (align with the hole on the bottom bracket), and secure with screws.


METEOR LIGHTING P: 213.255.2060 F: 213.596.3704 www.meteor-lighting.com

\*METEOR LIGHTING reserves the right to make changes to this product at any time without prior notice and such modification shall be effective immediately.

# METE **P**R


### Wiring Diagram


0-10V/Superior0-10V

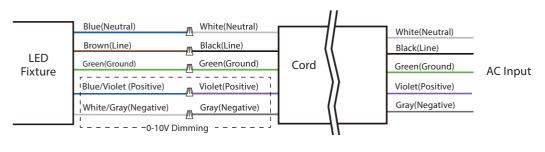



LED Fixture	Blue(Neutral)	 White(Neutral)	_
	Brown(Line)	 Black(Line)	AC Input
	Green(Ground)	 Green(Ground)	

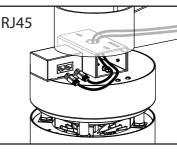


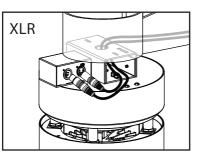

Connect DMX by using a standard shielded Connect DMX by using a standard CAT5/6 cable.

DMX512 XLR cable with 5 pin in/out connector (by others).

\*No more than 24 units should be placed on a single DMX daisy chain. \*Last fixture needs to be terminated with DMX Terminator (by others).

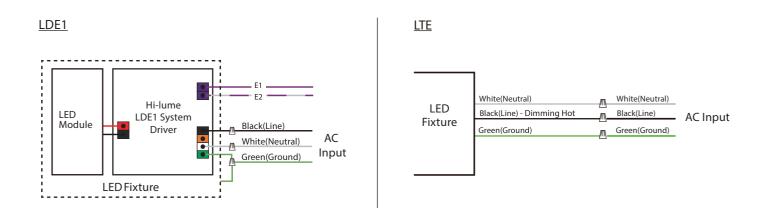

METEOR LIGHTING P: 213.255.2060 F: 213.596.3704 www.meteor-lighting.com

\*METEOR LIGHTING reserves the right to make changes to this product at any time without prior notice and such modification shall be effective immediately.

# METEOR

### Application note : Wiring for DMX/RDM lighting systems

DMX/RDM is a robust and reliable system for lighting control. However, if not implemented correctly, problems can arise such as random flashing of lights, erratic operation and delays in responding to commands. This document explains the best practices in DMX wiring.

#### Important things to consider are:

- 1. DMX is a three-wire system. Use all three!
- 2. DMX is based on the EIA-485/RS-485 standard.
- 3. Always use cable specifically designed for DMX / RS-485. These cables have an impedance of  $120\Omega$  and a low capacitance. For instance : Belden 9841 or 3105a.
- 4. DMX must be terminated with a  $120\Omega$  resistor to prevent reflections.
- 5. A daisy chain topology should be used.
- 6. After 32 unit loads a repeater/booster should be used. (Important : For tunable white fixtures, After "15" unit loads a repeater/booster should be used.)
- 7. Keep cabling below 200 meters between the controller and the last driver.
- 8. It is generally considered good practice to provide separate DMX in and DMX out / DMX thru connections to your fixture to aid in installation. This can be in the form of pigtails, RJ-45 connectors or 5-pin XLR connectors.
- 9. Use twisted pair cables with an impedance of  $120\Omega$  and a low capacitance.
- 10. UTP Cat5 or Cat6 network cable can also be used but have a slightly lower impedance of 100Ω.
- 11. If shielded cable is used, only connect shield to ground on one side (typically, the controller should have its shield terminal connected to ground).
- 12. Not following the above recommendations may seem to work at first, but can cause problems. Sometimes after weeks of seemingly normal operation.